

Item	Description	Qty	Item	Description	Qty
1	Frame	1	61	Upper Control Tube	1
2	Front Base Tube	1	62	Tube Cap P-1712(Ø1-1/4")	2
3	Movalbe Wheel 075 (FM002)	2	63	Handrail Assembly(Right)	1
4	Grank Assembly	1	64	Handrail Assembly(Left)	1
5	Idle Assembly	1	65	Upper Handrail(Left)	1
6	Belt Wheel(Big) Ø310 (J8)	1	66	Upper Handrail(Right)	1
7	Plastic Washer Ø8XØ19X5.5t	2	67		
8	CKS Hex Screw M8XP1.25X20 (BK)	4	68	Motion Arm(Right)	1
9	Nylon Nut M8XP1.25 (BK)	14	69	Motion Arm(Left)	1
10	Belt 49" J8	1	70	Fisheye(Universal Bearing POS12-R(Ø12)	2
11	Screw (SK-437) 3/8"x16牙X31 (牙長=10) (BK)	1	71	Nylon Nut M12	2
12	Nylon Nut 3/8"x16牙 (BK)	1	72	Motion Axis NT-1461	2
13	Idle Incline Spring NS-122	1	73	CKS Hex Screw M8XP1.25X15	4
14	Bearing 6204ZZ	4	74	Plastic Washer P-1651 (BK)	2
15	C-Shaped Ring Ø20 (BK)	2	75	Plug P-1393	4
16			76	Flat Washer Ø8.5XØ19X2.0t (BK)	4
17			77	Middle Frame Cover P-1507	1
18	Inductor Fixing Base P-1152	1	78	Pedal Iron Tube Protecting P-1517L	1
19	Washer Drilling Philips Sc M4XP0.7X16 (BK)	1	79	Pedal Iron Tube Protecting P-1517R	1
20	Frame Side Cover(Left) P-1506L	1	80	Front Handrail Protecting P-1527	1
21	Frame Side Cover(Right) P-1506R	1	81	Rear Handrail Protecting CP-1527A	1
22	Lock Plastic Fixing Iron P NO-3141	2	82	Front Handrail Protecting P-1527B	1
23	Lock Plastic Fixing Iron P NO-3141A	1	83	Rear Handrail Protecting CP-1527C	1
24	Truss Philips Screw M5XP0.8X10 (BK)	11	84	Foam Sticker 70X40X5.0t	4
25	Truss Philips Wood Screw Ø4X16 (BK)	6	85	Link Bar Protecting Cover P-1518L	2
26	Turnplate Cross	2	86	Link Bar Protecting Cover P-1518R	2
27	Plastic Turnplate P-1504	2	87	Pedal P-1519	2
28	Truss Philips Wood Screw Ø5X15 (BK)	16	88	Control Tube Plastic P-1508	1
29	Washer Nut M14XP1.5X10t	2	89	Computer Console	1
30	Turnplate Protecting Cove P-1505	2	90	Spring Washer M10用 (BK)	4
31			91		
32			92	Nut M8XP1.25 (BK)	2
33			93	Truss Philips Screw(Blue) M5XP0.8X10 (BK)	8
34			94	Flat Washer Ø6XØ13X1.0t (BK)	12
35			95	CKS Hex Screw M12XP1.75X40 (BK)	2
36			96	Nylon Nut M12XP1.75 (BK)	2
37			97	CKS Hex Screw M8XP1.25X60 (BK)	2
38			98	CKS Hex Screw M8XP1.25X15 (BK)	1
39	Adjustment Food Pad 3/8"x29mm	2	99	Arc Washer NO-2014 (BK)	5
40			100	Handrail Fixing Plastic P-1520	2
41			101	Screw M8XP1.25X45 (BK)	4
42	Rear Stabilizer Protecting P-1972	1	102	Truss Philips Screw(Blue) M4XP0.7X8 (BK)	4
43			103	Nut M6XP1.0 (BK)	4
44	Nylon Nut M20XP1.0	1	104	Bottle Holder NT-771	1
45			105	Bottle Holder L-027	1
46			106	TV Decoration Cover P-1646	1
47	Pedal Iron Tube Plastic	2	107		
48	Wheel P-1728A(Ø74X44)	2	108		
49	Bearing 6003ZZ	12	109	Adjustment Screw M6XP1.0X35	2
50			110		
51	Outer and Inner Pumping 'Ø18XØ23.7X7.2	4	111		
52	Truss Hex Screw M8XP1.25X15 (BK)	12	112		
53	Pedal Fixing Plate Assembly(Front)	2	113		
54			114		
55	CKS Hex Screw M8XP1.25X85 (BK) 30mm	2	115	Washer Ø8XØ25X2.0t (BK)	4
56	Plug Ø1-1/2"x2.0t	2	116	Power Supply IN:110V OUT:9V 1A DC	1
57	Pedal Iron Tube Plastic Cc NT-1560	2	117		
58			118		
59			119		
60	Truss Philips Screw M4XP0.7X15 (BK)	12	120		

Item	Description	Qty	Item	Description	Qty
121	Hand Pulse Set	2	176	Grinding Wheel Ø270	1
122			177	Motor XM-187	1
123	Inching Pedal Decal(Left) RBC-6605-003L	1	178	Tightwire NY-006	1
124	Inching Pedal Decal(Right) RBC-6605-003R	1	179	Truss Philips M6XP1. 0X10 (BK)	2
125			180	Toothed Tube Fixing Core NT-2065	2
126	Hand Pulse Cord XL-270 720mm	2	181	Rear Stabilizer Cover	1
127			182	Plug Ø60	2
128			183	Screw Thread Tooted Tub NT-2066	2
129			184	Wheel Fixing Bushing NT-1688	2
130	Spring Washer M6	2	185	CKS Hex Screw M8XP1. 25X80 (15) (BK)	2
131			186	Fixing Plastic P-1928 (BK)	4
132	Button P-1144A & NT-2068	2	187	C-Shaped Ring Ø8	4
133			188	Wheel Cover (left) P-1929L	2
134			189	Wheel Cover (Right) P-1929R	2
135			190	Plug 30X60 ()	2
136			191	Motor Control Wier(Uppe) XL-574	1
137	Hollow Pin Ø3x5	2	192	Motor Control Wire(Midd) XL-576	1
138	Flat Washer Ø8. 5XØ20X1. 5t (BK)	8	193	Speed Sensor Wire XL-578	1
139			194	Power Supply Wire XL-588	1
140			195	CKS Hex Screw M10XP1. 5X83 (BK)	4
141			196		
142			197		
143			198		
144			199		
145			200		
146			201	Adjustment Foot Pad 3/8"X50MM	2
147			202	Nut 3/8"X16牙	4
148	Wireless Pulse Emitter	1	203	Flat Washer Ø10XØ20X2. 0t	4
149			204		
150			205	Adjustable Pedal Assembly	2
151			206	Adjustabel Slip Axis NT-2064	4
152			207	Round Head Philips Screw M4XP0. 7X10 (BK)	2
153			208	Round Head Philips Screw M4XP0. 7X15 (BK)	2
154	Wave Washer Ø17XØ24x0. 3t	4			
155					
156	PVC Foam Grip Ø5/8" x5tx60	1			
157	Beaing 6904VV	4			
158	Wave Washer Ø20. 7XØ29. 1x0. 3t	2			
159					
160					
161	Truss Philips M4xP0. 7x10 (BK)	2			
162	Foam Sticker 90X90X3. 0t	2			
163	EVA Pad 50x50x5. 0t (BK)	2			
164	Truss Philips Screw M5XP0. 8X15 (BK)	2			
165	Truss Philips Wood Screw Ø5X12	4			
166					
167					
168	Belt Wheel Sleeve Inner CNT-1633	1			
169					
170	C-Shaped Ring Ø11	2			
171					
172	Hex Nut 5/8"-18UNF	2			
173					
174	Screw Thread NT-1911	2			
175					