



# T9 Treadmill Owner's Manual

---



## **BH FITNESS**

20155 Ellipse, Foothill Ranch, CA 92610

Phone: 949-206-8152,

Fax: 949-206-0013

Email: [fitness@bhnorthamerica.com](mailto:fitness@bhnorthamerica.com)

Web: [www.bhnorthamerica.com](http://www.bhnorthamerica.com) and [www.bhfitness.com](http://www.bhfitness.com)

Issued: 6/23/08 (v1)

Revised: 11/12/08 (v2)

## INTRODUCTION:

Congratulations for selecting BH FITNESS as a fitness resource. BH FITNESS treadmills offer many exercise programs that benefit users of all levels and ages. Your new treadmill is designed to make your workouts more effective and enjoyable. **Please read this entire manual carefully before using your treadmill.** This will allow you to get a full understanding of all the features your BH FITNESS treadmill provides. If you have any questions or concerns, please contact the BH FITNESS or any authorized BH FITNESS distributors in your area.

### BH FITNESS


20155 Ellipse, Foothill Ranch, CA 92610

Phone: 949-206-8152, 800-475-7899 (USA only), 866-325-2339 (USA & Canada)

Fax: 949-206-0013; Email: [fitness@bhnorthamerica.com](mailto:fitness@bhnorthamerica.com)

## BEFORE YOU BEGIN

It is very important to become familiar with the frequently used components of your BH Fitness treadmill.

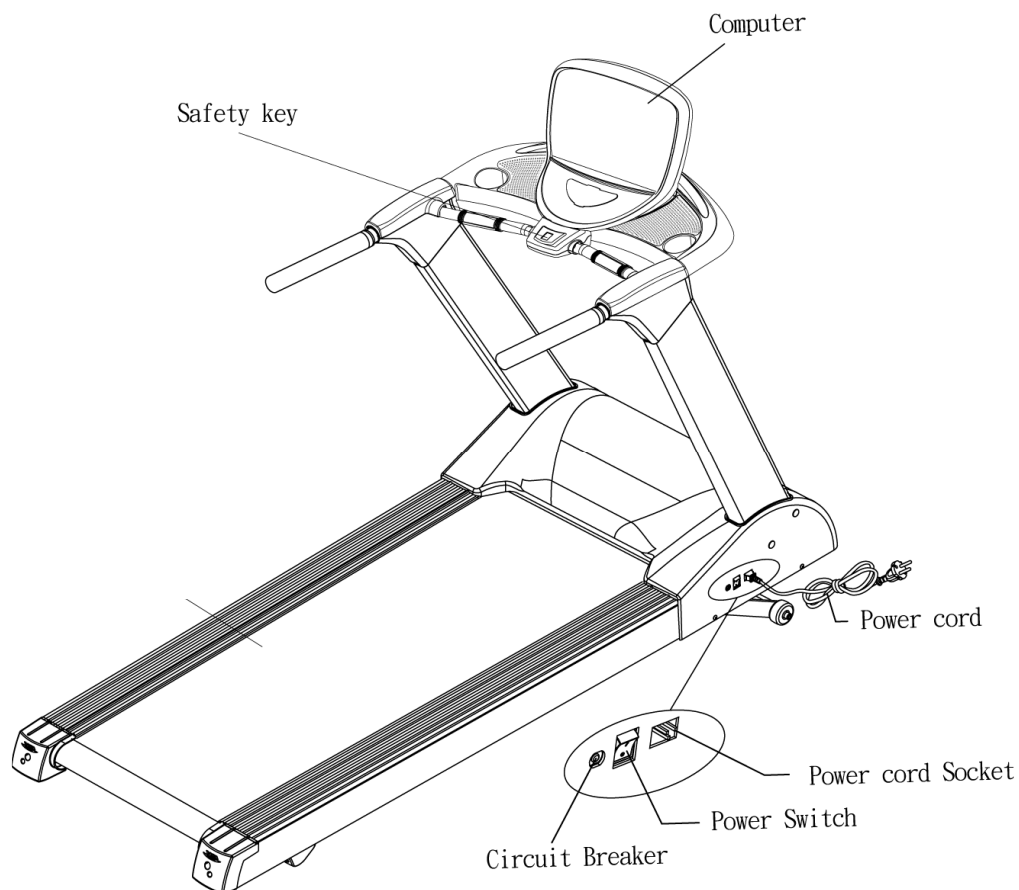



**TABLE OF CONTENTS**

<u>SECTION</u>	<u>PAGE</u>
1. IMPORTANT SAFETY INSTRUCTIONS.....	3
2. ASSEMBLY INSTRUCTIONS.....	5
3. GETTING STARTED.....	10
4. PROGRAM DETAILS .....	17
5. PREVENTIVE MAINTENANCE.....	24
6. TROUBLESHOOTING.....	25
7. WARRANTY .....	27



## SECTION 1

# IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the treadmill.

### User Safety:

Before using this or any other exercise equipment **consult your family physician or health care professional** in order to develop a well-planned exercise program to fit your health needs. If you encounter any pain or breathing discomfort while working out, **STOP!**, and consult a physician before continuing.

1. Close supervision is necessary when this unit is used by or near children, invalids or disabled persons. Children are curious and vulnerable to accidents. Do not use the unit as a toy.
2. Do not wear loose or dangling clothing while using the treadmill.
3. Maximum user weight is 425 lbs.
4. Only one person can use the unit at a time.
5. Keep hands away from moving parts.
6. The owner is responsible for explaining safety instructions to each user.

### Treadmill Safety:

**WARNING: To reduce the risk of fire, electric shock, injury to persons or inflicting the harm of a burn:**

7. Turn all the controls to the off position prior to removing the electrical plug from the outlet. The on/off switch is located on the right, front of the unit.
8. Never leave the unit unattended when plugged in. Unplug the unit from the electrical power before leaving the room, when unused and before servicing, adding or removing parts.
9. Unplug the treadmill prior to cleaning to reduce the risk of electric shock, serious burns, and the risk of injuries.
10. Never operate this unit if it has a damaged electrical cord or plug. Do not operate this unit if it is not working properly. Do not operate this unit if it has been dropped or damaged. Do not operate this unit if it has been immersed into water. Return the unit to a service center for examination and repair.
11. Do not pull or carry the unit by the electrical cord. Do not use the cord as a handle.
12. Keep the electrical cord away from heated surfaces.
13. Connect this Treadmill to a properly grounded 110-120V, 15 or 20 Amp dedicated outlet only.
14. Call your service center or BH Fitness with your concerns before taking your treadmill in for repair.
15. Do not place sharp objects near the unit. Never drop or insert any object into any opening.
16. Do not use outdoors.
17. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
18. Use the unit only as described in this manual. Only use attachments recommended by the manufacturer.
19. For safety, keep a minimum clearance of 18" on the front and each side and 24" at the rear of the treadmill. Place the unit on a flat stable surface.

*Please save these Instructions*

## IMPORTANT SAFETY INSTRUCTIONS CONTINUED


### GROUNDING INSTRUCTIONS

This product must be grounded. If it malfunctions or breaks down, grounding provides a path of least resistance for electric currents, to reduce the risk of electric shock. This product is equipped with a cord that has an equipment-grounding conductor and a grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**WARNING!** – An improper connection of the grounding conductor can result in a risk of an electrical shock. Check with a qualified electrician if you are not sure if the unit is properly grounded. Do not modify the plug provided to you. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

The electricity for this unit must come from a nominal 110-120 volt circuit. The unit has a grounding pin that looks like the pin illustrated in the figure. Make sure that the plug is inserted to an outlet having the same configuration as the plug. Do not use an adapter or extension cord with this unit.


### GROUNDING METHODS

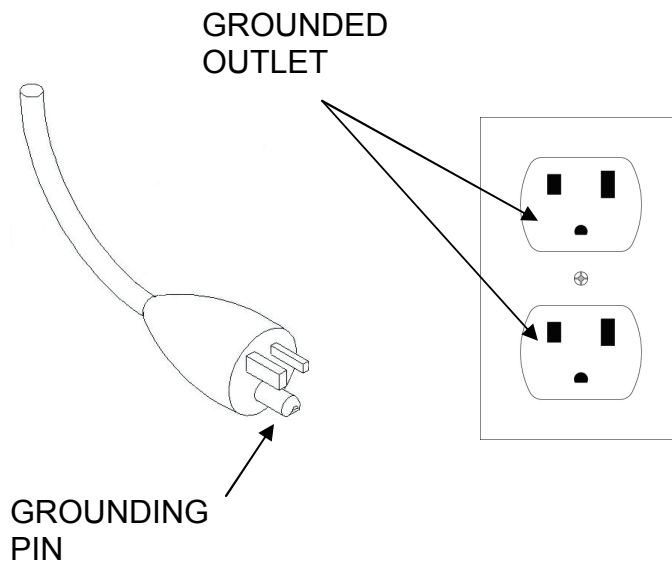

**SECTION 2**


**ASSEMBLY INSTRUCTIONS**

ITEM	DESCRIPTION	QTY
A	Computer Set	1
B	Frame	1
C	Left Upright	1
D	Right Upright	1
E	Console Welding-Base	1
F	Left Handrail Cover	1
G	Right Handrail Cover	1
H	Left Handrail	1
I	Right Handrail	1
J	Console & Bottle Holder/Cover	1
K	Computer cover	1
L	Bottle	1

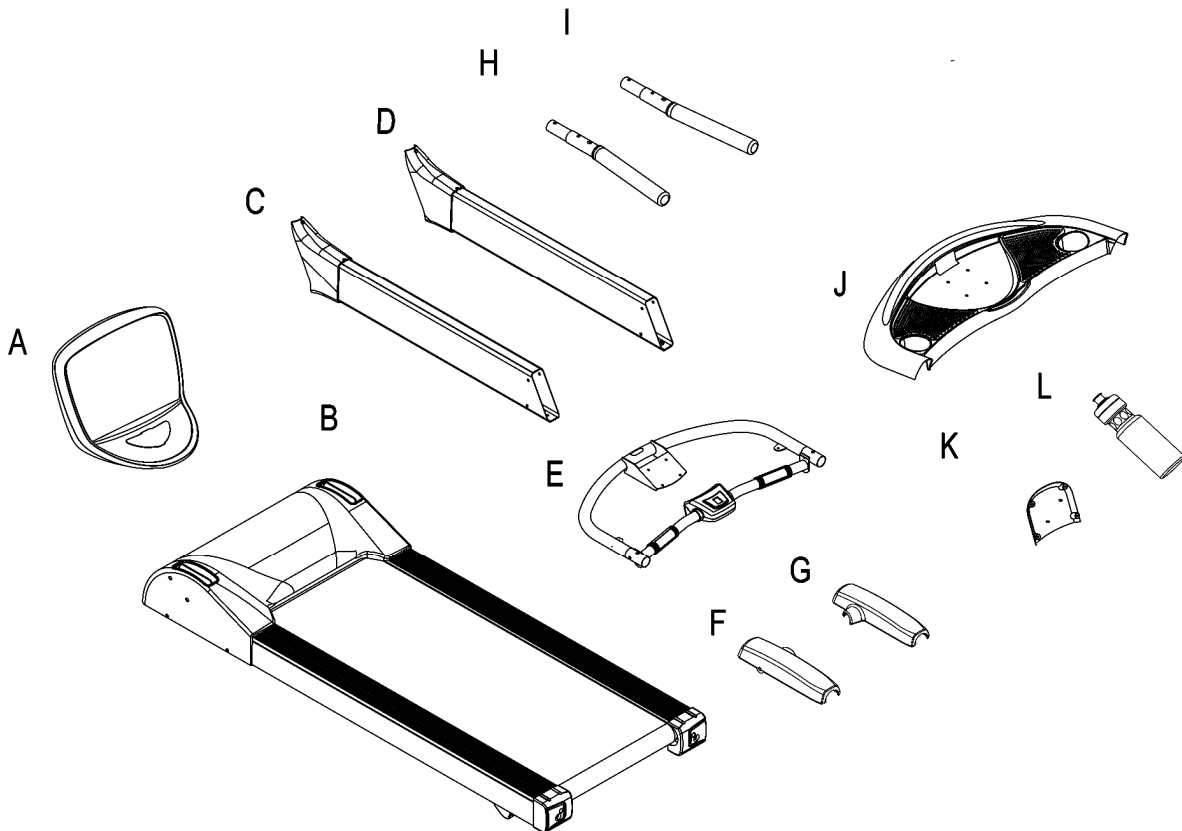

## ASSEMBLY INSTRUCTIONS CONTINUED

ITEM	DESCRIPTION	QTY
a	Bolt M8xP1.25x40	2
b	Bolt M8xP1.25x75	4
c	Bolt Cover	6
d	Bolt M8xP1.25x60	4
e	Screw $\psi$ 5x25	2
f	Screw $\psi$ 4x12	2
g	Nut	4
h	Bolt M6x15L	2
i	Screw $\psi$ 4x16	1
j	Allen Wrench	1
k	T-Wrench	1
l	Power Cord	1
m	Safety Key/Clip	1
n	SILICON	1
o	Bolt M4xP0.7x8	4
p	Sleeve Wrench and Screwdriver	1
q	TV remote controller	1
r	MP3 Sound Cable	1

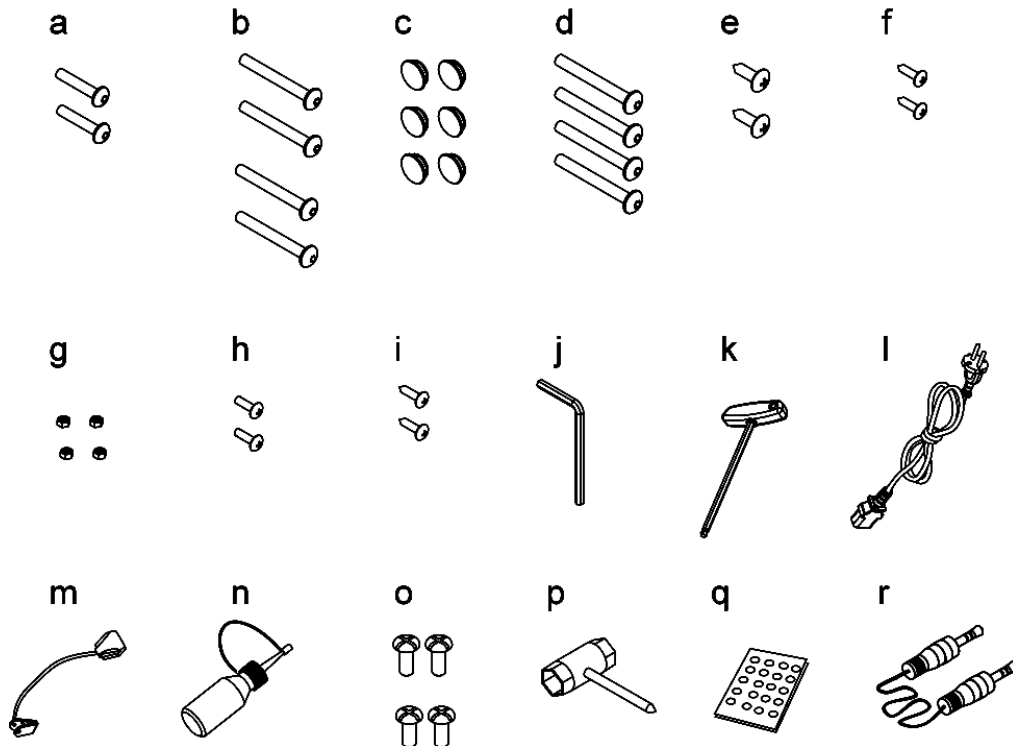


## ASSEMBLY INSTRUCTIONS CONTINUED

A minimum of two people are required to assemble this treadmill.

READ and understand ALL INSTRUCTIONS thoroughly BEFORE ASSEMBLING the treadmill


1. Pull out the main wire within left upright (C) and right upright (D) with attached guide wire.
2. Insert both uprights (C, D) into the frame (B).
3. Tighten with bolts (a, b).
4. Cover the bolts with bolt covers (c) as shown in the drawing.

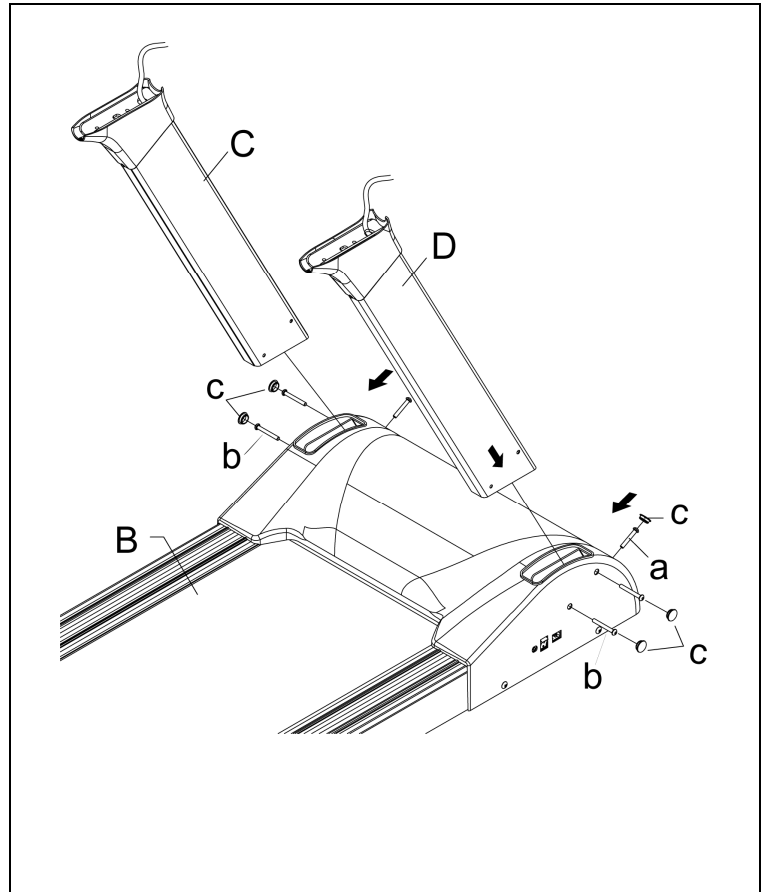

5. Insert handrails (H, I) into the Computer Console Welding Base (E) Mounting Tubes.

**NOTE:**


Make sure that the holes are aligned.

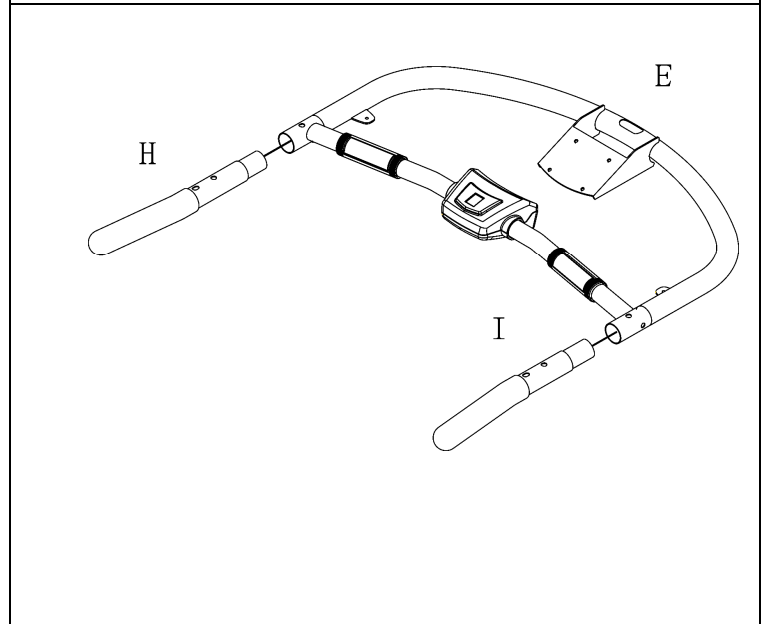

## ASSEMBLY INSTRUCTIONS CONTINUED


6. Insert the wires from uprights (C) and (D) through the console welding-base (E) and pull the wires out of the upper holes of (E).
7. Place (E) onto the uprights.
8. Attach (E) to the uprights with (4) Bolts (d).

**NOTE:** When fastening the bolts securing the upright and handrail, please ensure that the bolts do not pinch the wires.

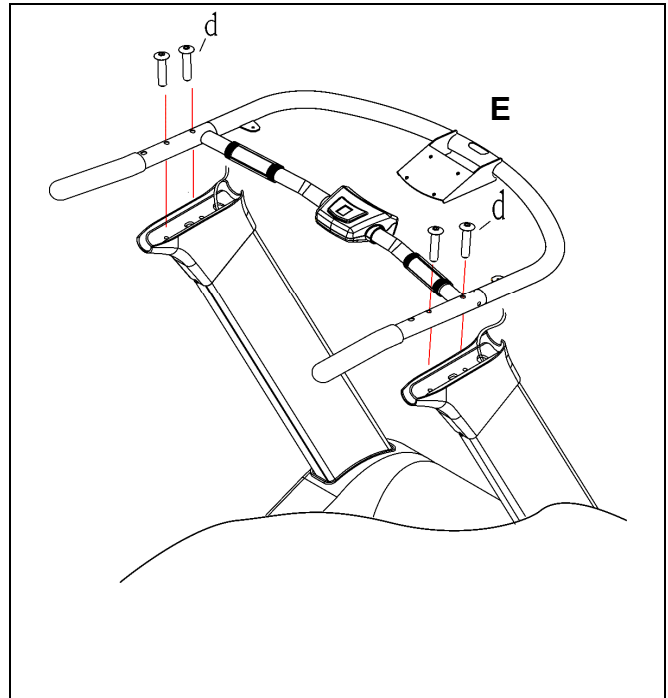

9. Place the bottle holder (J) onto (E) and tighten with screws (f).
10. Fasten the right and left handrails covers (F, G) with screws (e, i) and bolt (h).


**NOTE:** When fastening the screws and bolts, please ensure that the wires are not pinched.

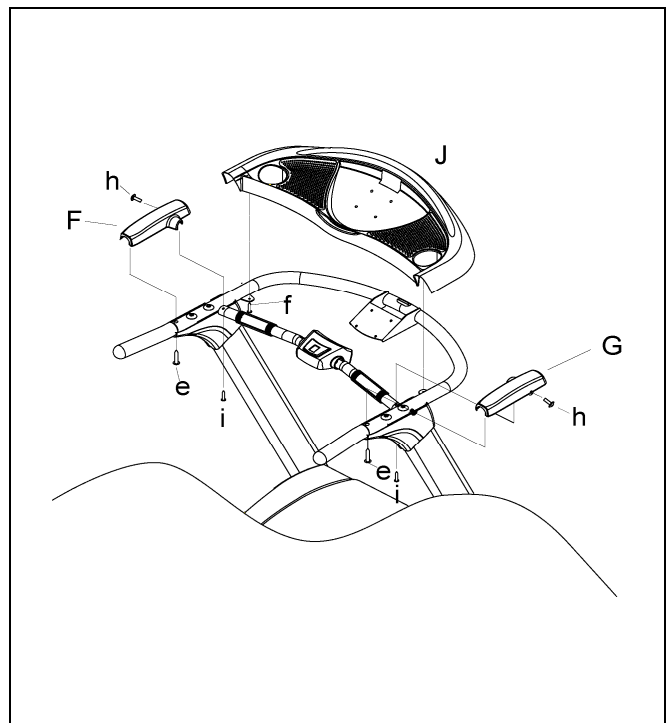

## ASSEMBLY INSTRUCTIONS CONTINUED


**NOTE:** Handle the wiring and fasteners carefully to prevent wire damage

11. Connect all the wire harnesses and cables from the bottle holder mounting cover (J) to the TV Console (A).
12. Secure Computer Cover (K) with (4) bolts (o).
13. Place the TV display console on the bottle holder mounting cover (J) and fasten with 4 nuts (g) as shown.

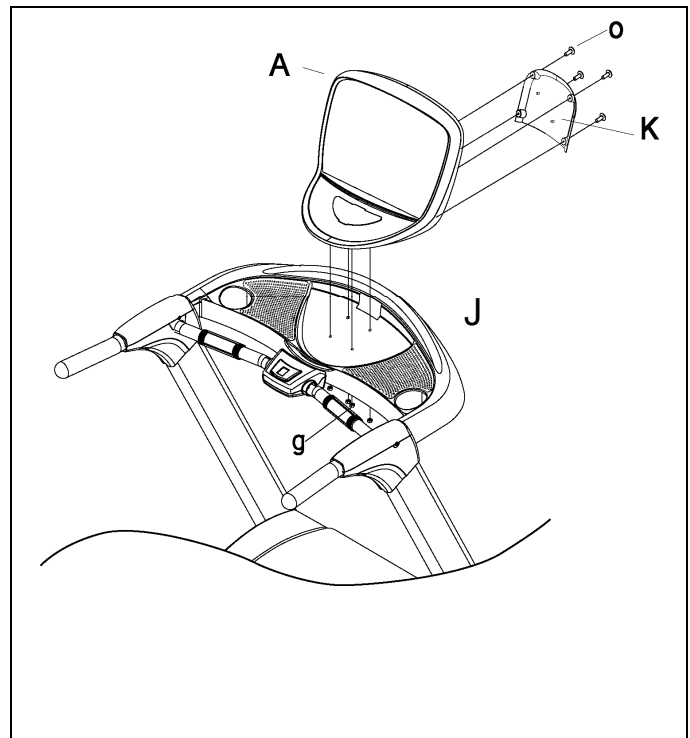

SECTION 3


**GETTING STARTED**

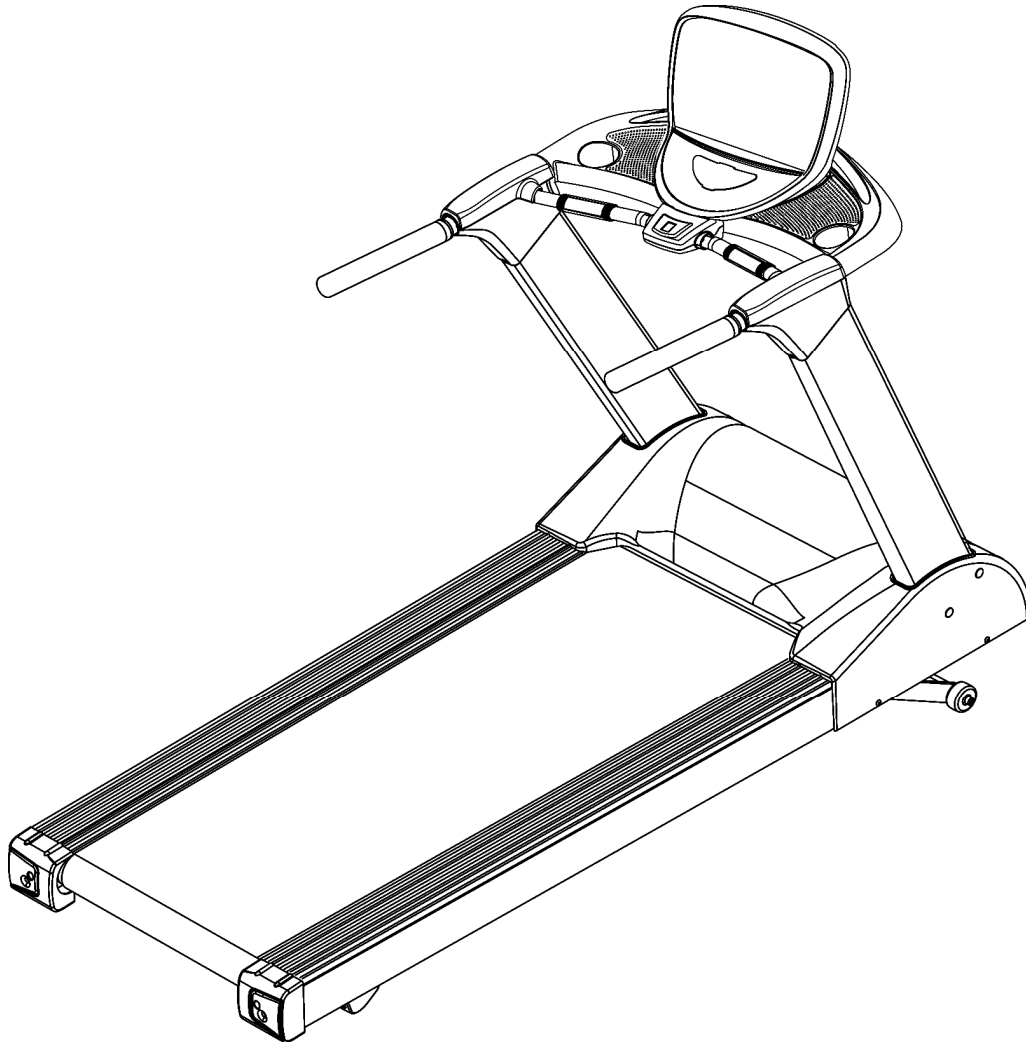

**MOVING THE TREADMILL**

The treadmill has wheels located at the front as part of the inclination assembly. Elevate the treadmill up to 10% or greater then unplug. Next, lift the rear of the treadmill and push the treadmill using the front wheels.


## GETTING STARTED CONTINUED

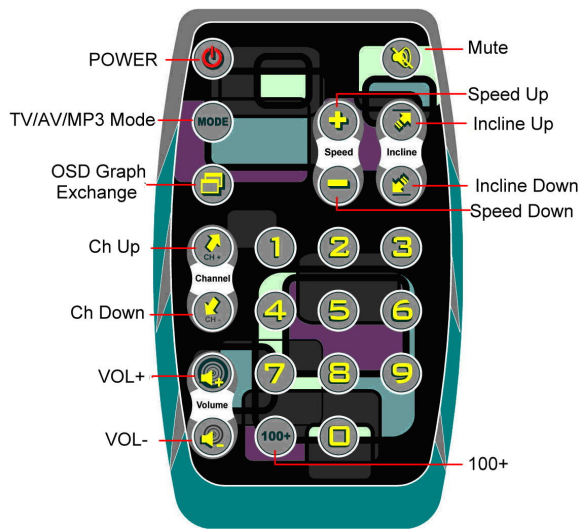

### REMOTE CONTROL

### T9

### SAFETY KEY & CLIP

Your BH Fitness treadmill is equipped with a safety key that will disable the treadmill if it is removed. You should attach the clip end to your clothing. The magnet end goes into the recess of the console. If at any time you need to stop the treadmill quickly simply pull the safety key off the console, you will see  on the screen. This will cut all power to the treadmill and it will come to a complete stop. To resume your workout, place the safety key back in place. You will then need to program your workout again.

### BEFORE STARTING

Straddle the running belt and stand on the side rails. Insert the safety key and attach the clip to your clothing. Do not stand on the walking belt while starting or stopping the treadmill.


### TO STOP

1. Step off running belt onto the side rails.
2. Press STOP. The running belt will stop.

**NOTE:** For an immediate stop, pull the safety key out of the safety key recess and the treadmill will stop abruptly.

## GETTING STARTED CONTINUED

### TV SYSTEM SELECTION SETUP

1. Turn on POWER using the switch on the bottom, front, right of treadmill frame.
2. Main Screen (displayed at right) will appear after ~20 seconds.
3. Press and hold **STOP** button (located at the bottom right of the LCD screen) for about 10 seconds until you hear a beep, and then press “Speed ” (located at the left of the LCD screen).
4. Select “TV System Selection” screen (shown at the bottom center of the white screen)



5. The TV System Selection window Appear (shown at right)
6. Select the appropriate cable setting for your area. Typically, this is NTSC-M in North America
7. The display will revert back to the white screen shown in step 4 (above)



## GETTING STARTED CONTINUED

8. Select the appropriate method of cable reception and follow the appropriate steps below:  
 TV (antenna signal) or  
 CATV (coaxial cable)

### TV

- a) Using the button located to the right of the “TV System Selection” button, select “TV”
- b) Press “SCAN”
- c) The display will search for all channels that have a strong enough signal.  
 Once completed, the screen will show the white screen above.
- d) Press “ENTER” (at the right of the white screen)
- e) The Main Screen will be display and the channels are now set



### CATV

- a) Using the button located to the right of the “TV System Selection” button, select “CATV”
- b) Press “SCAN”
- c) The display will search for all channels that have a strong enough signal. Once completed, the screen will show the white screen above.
- d) Press “ENTER” (at the right of the white screen)
- e) The Main Screen will be display and the channels are now set


## UNIT OF SYSTEM SELECTION

1. If required, to switch between Metric and English, select the white “TV System Selection” screen (shown above)
2. Press and hold ENTER for ~10 seconds
3. The Software Screen will appear (at right)
4. Press ENTER to select the KM/H/MPH option
5. Press + for Metric or – for English.  
 When selected 0000 indicates English (MPH) 0001 indicates Metric (KPH)
5. Press ENTER two or three times to end until the MAIN SCREEN appears









## GETTING STARTED CONTINUED

### TV/CATV/AV OPERATION

6. With the left button set to **OFF**, you can press the right button to select among TV, CATV, AV or Music (MP3). When it is **ON**, then the Main Screen Displays the exercise PROGRAMS.
7. Adjust volume or channel using these buttons. 
8. When the left button is set to ON, then the TV, CATV and MP3 are disabled.



### QUICK START

1. Turn on POWER using the switch on bottom, front and right of Frame.
2. Press QUICKSTART on lower console or on screen. The running belt will start to move at 0.5 MPH.
3. Adjust Speed with  keys on lower console or   on screen.
4. Adjust Incline with  keys on lower console or   on screen.

## GETTING STARTED CONTINUED

### PROGRAM SETUP

1. Turn on POWER.
2. Main Screen Display on the right appears after 20 seconds.
3. Press buttons on screen to select any program.
4. A set of instructions for a Program will appear. The PROGRAMS are explained on pages 18-23.




5. Adjust input value by pressing or keys on screen.
6. Press ENTER to go to the next selection.
7. Repeat steps 5 and 6.
8. Press ENTER to begin.
9. Screen will display a workout chart like the one shown on the right.

**Top:** 1-hour workout profile - Each grid represents a 5-minute interval.

**Bottom:** Current workout profile shown in a 5-minute interval.

**Note:** Blue line indicates inclination and Light yellow line indicates speed.

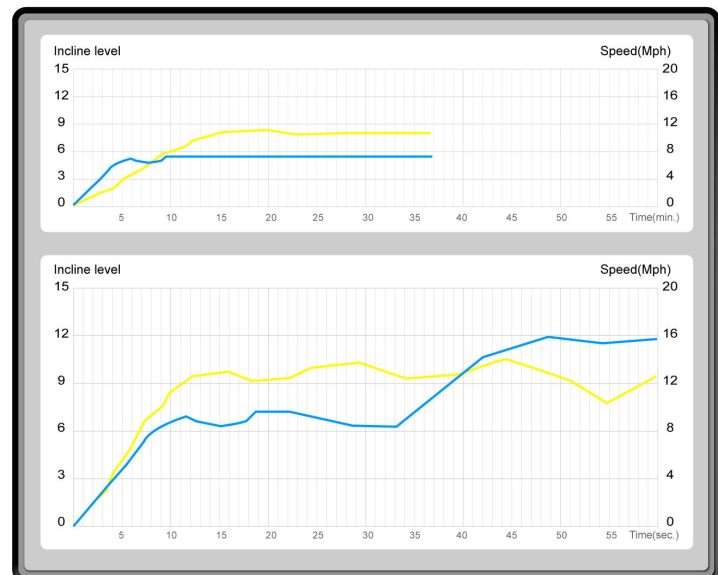

## GETTING STARTED CONTINUED


### USING HEART RATE

To check your heart rate, grasp the sensors at the base of the console or wear the chest band. The PULSE LED will flash and after about 9 seconds, your pulse will appear in the pulse window.

### LOWER CONSOLE KEY FUNCTIONS

**QUICKSTART** – This key is used to begin the QUICKSTART PROGRAM or restart the treadmill after PAUSE was pressed. The user can adjust the speed and incline any time during the QUICKSTART PROGRAM.

**STOP/RESET** – This key is used to stop the treadmill at any time. Press the STOP/RESET button and hold for 5 seconds (until it beeps) and the treadmill will reset the INCLINE to zero.



These keys on the lower console are used to adjust the speed on the treadmill.



These keys on the lower console are used to adjust the inclination on the treadmill.

**NOTE:** To change values rapidly, press and HOLD the  or  buttons.

**INSTANT SPEED/INCLINE KEYS** – You can change the speed or inclination of the treadmill by pressing one of the Instant Key buttons on the display console. Each key represents the assigned value in either Miles per hour (MPH) or percent incline.

### UPPER CONSOLE FEEDBACK AND FUNCTIONS

**START** – Will re-start a paused PROGRAM.

**PAUSE** – Will pause the PROGRAM that is entered.

**STOP** – Will end an entered or paused PROGRAM. It will not reset the Incline to zero.



## GETTING STARTED CONTINUED

**TIME** – This will read the number of minutes left in the program that you have selected. In QUICKSTART, it will read the number of minutes that you have been exercising.

**KCAL** – This reading is the amount of body heat in Kilocalories burned during your workout. This is an estimated value.

**INCLINE** – Incline will read as a percent of grade.


**NOTE:** Additional information about Incline:

1. When the safety key is removed and put back, whatever the current position of incline, it will not return automatically to zero. The user must press the STOP/RESET key to return the incline to zero.
2. When the user turns off power and then turns it back on, whatever the current position of incline, it will not return automatically to zero. The user must press the STOP/RESET key to return the incline to zero.
3. In the PAUSE position, press the STOP/RESET key for 5 seconds and whatever the current position of incline, it will return to zero.

**PULSE** – Pulse will read in beats per minute (BPM).

**SPEED** – This is how fast you are moving in terms of miles per hour (MPH).

**DISTANCE** – Total distance traveled during your workout. This value is displayed in miles.



– Keys are used to change values of speed and incline on screen.

## SECTION 4

### PROGRAM DETAILS

#### CALCULATING YOUR TARGET HEART RATE

Calculate the exercise heart rate range before starting any exercise.

Heart Rate (HR) training has become one of the most popular forms of monitoring your workouts. Nothing tells you how your body is feeling like your own heart. By using your heart rate to tell you how hard to train, you can maximize your workout results.

##### STEP ONE

###### **Determining your Maximum Heart Rate:**

The standard calculation for determining your maximum heart rate, Beats per Minute (BPM), is by subtracting your age from the number 220.

Example: If you are 30 years of age, your maximum heart rate is:  
 $220 - 30 = 190 \text{ BPM}$

##### STEP TWO

###### **Select your ideal workout HR Zone:**

Once you have your Maximum Heart rate you can use it to determine your Target HR Zone based on your fitness goal(s).

Recent studies have shown:

60-70% of your maximum HR will allow you to Lose Weight.

70-80% of your maximum HR will improve your Aerobic Fitness.

80-85% will increase your Athletic Performance.

NOTE: DO NOT exceed 85% of your maximum heart rate.

##### STEP THREE

###### **Calculate your ideal Target HR:**

Using the above percentages, you can calculate your ideal Target Heart Rate for your specific goal.

As an example, the average 30 year old can:

Maximize burn fat / weight loss, by maintaining ~123 BPM during your workout

$$190 * 0.65 = 123 \text{ BPM.}$$

Improve aerobic fitness, by maintaining ~142 BPM during your workout

$$190 * 0.75 = 142 \text{ BPM.}$$

Do not exceed  $190 * 0.85 = 161 \text{ BPM.}$


Remember to **consult your family physician or health care professional** to develop a well-planned exercise program to fit your health needs.

## PROGRAM DETAILS CONTINUED



### HRC

**NOTE: The included chest strap **MUST** be worn to record heart rate. The Treadmills hand pulse grips will not record heart rate during this test. If required, a POLAR T41 Transmitter is equivalent to the included chest strap.**


1. Calculate the exercise heart rate range before starting any exercise. The calculation is explained on page 17.
2. Press 
3. Enter Weight with the +/- buttons on the touch screen and press ENTER.
4. Enter Age with the +/- buttons on the touch screen and press ENTER.
5. Enter BPM (Heart Beats Per Minute (Pulse)) with the +/- buttons on the touch screen and press ENTER.
6. Enter Time with the +/- buttons on the touch screen and press ENTER. After a 3-second countdown, the program will start.

## PROGRAM DETAILS CONTINUED



### 9 Hole Run

(The 9 Hole is a preset distance of 2.17 miles. No need to adjust time)

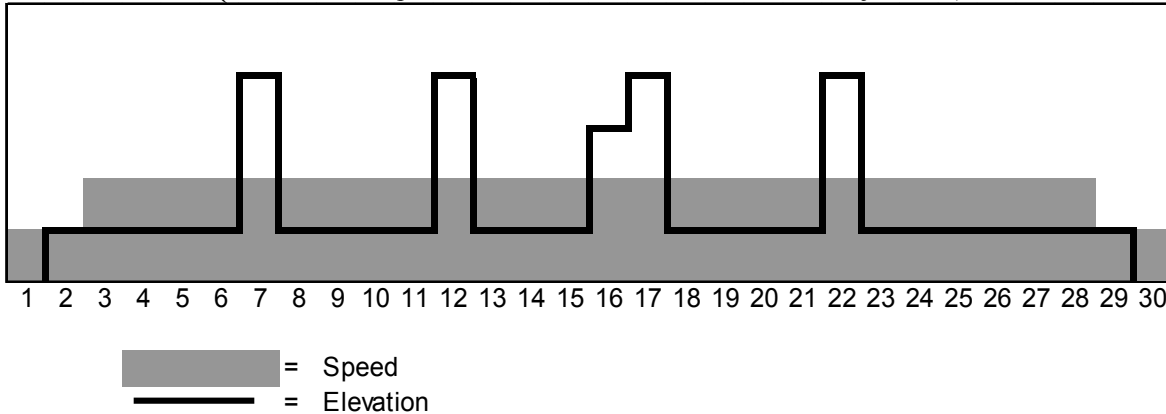


1. Calculate the exercise heart rate range before starting any exercise. The calculation is explained on page 17.
2. Press
3. Enter Weight with the +/- buttons on the touch screen and press ENTER.
4. Enter Level 1-10 with the +/- buttons on the touch screen and press ENTER.

After a 3-second countdown, the program will start.




### - 5K Run

(The 5K Run is a preset distance of 3.11 miles. No need to adjust time)

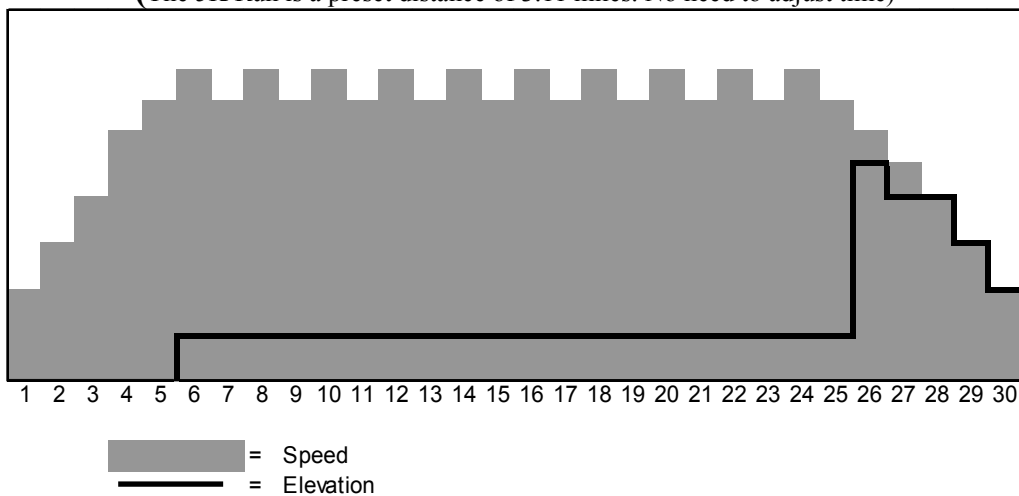


## PROGRAM DETAILS CONTINUED

1. Calculate the exercise heart rate range before starting any exercise. The calculation is explained on page 17.
2. Press 
3. Enter Weight with the +/- buttons on the touch screen and press ENTER.
4. Enter Level 1-10 with the +/- buttons on the touch screen and press ENTER.


After a 3-second countdown, the program will start.



### - Calorie Goal

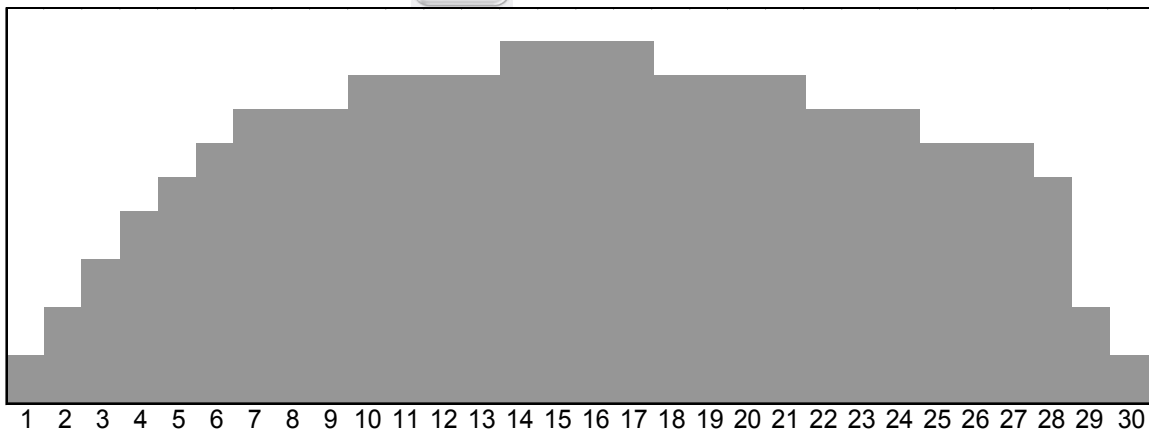

 = Speed  
 = Elevation


1. Calculate the exercise heart rate range before starting any exercise. The calculation is explained on page 17.
2. Press 
3. Enter Weight with the +/- buttons on the touch screen and press ENTER.
4. Enter Calories with the +/- buttons on the touch screen and press ENTER.
5. Enter Level 1-10 with the +/- buttons on the touch screen and press ENTER.


After a 3-second countdown, the program will start.

## PROGRAM DETAILS CONTINUED




### - Aerobic

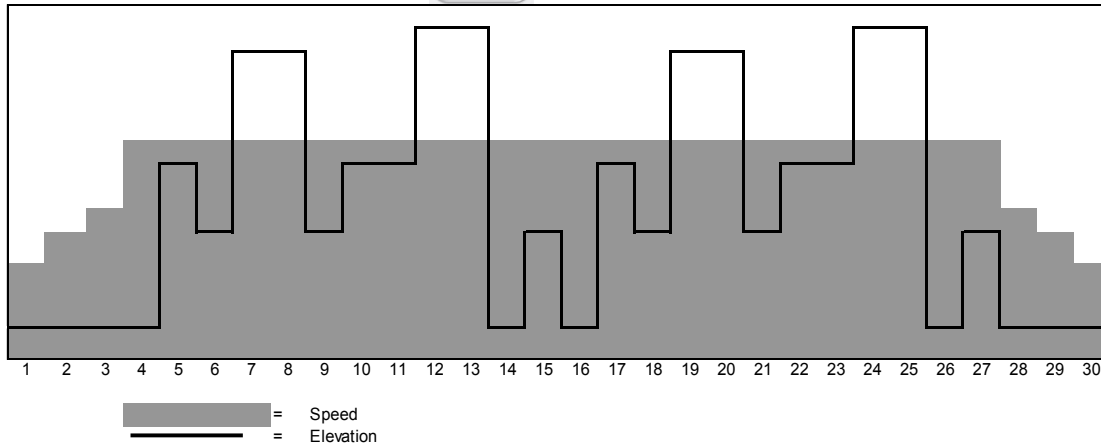


1. Calculate the exercise heart rate range before starting any exercise. The calculation is explained on page 17.
2. Press 
3. Enter Weight with the +/- buttons on the touch screen and press ENTER.
4. Enter Level 1-10 with the +/- buttons on the touch screen and press ENTER.
5. Enter Time with the +/- buttons on the touch screen and press ENTER. After a 3-second countdown, the program will start.



### - Highland Run

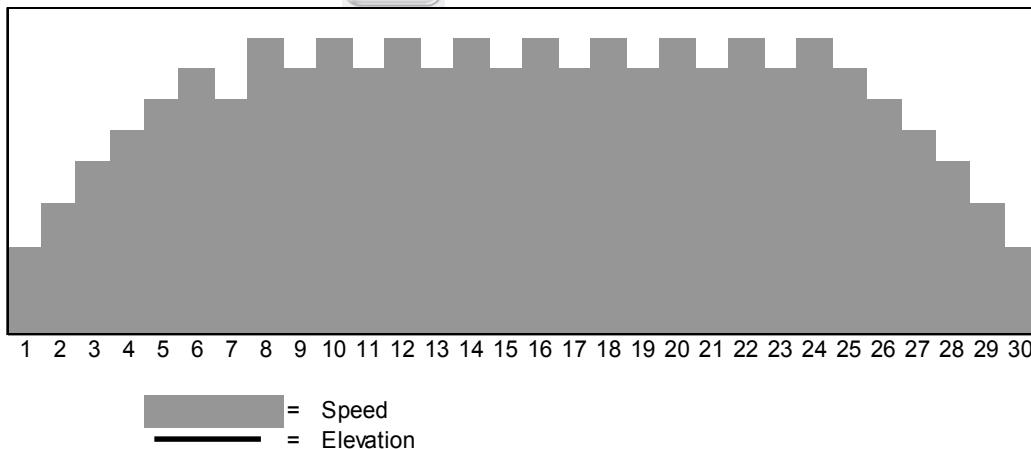


## PROGRAM DETAILS CONTINUED


1. Calculate the exercise heart rate range before starting any exercise. The calculation is explained on page 17.
2. Press 
3. Enter Weight with the +/- buttons on the touch screen and press ENTER.
4. Enter Level 1-10 with the +/- buttons on the touch screen and press ENTER.
5. Enter Time with the +/- buttons on the touch screen and press ENTER. After a 3-second countdown, the program will start.



### - Hill Interval

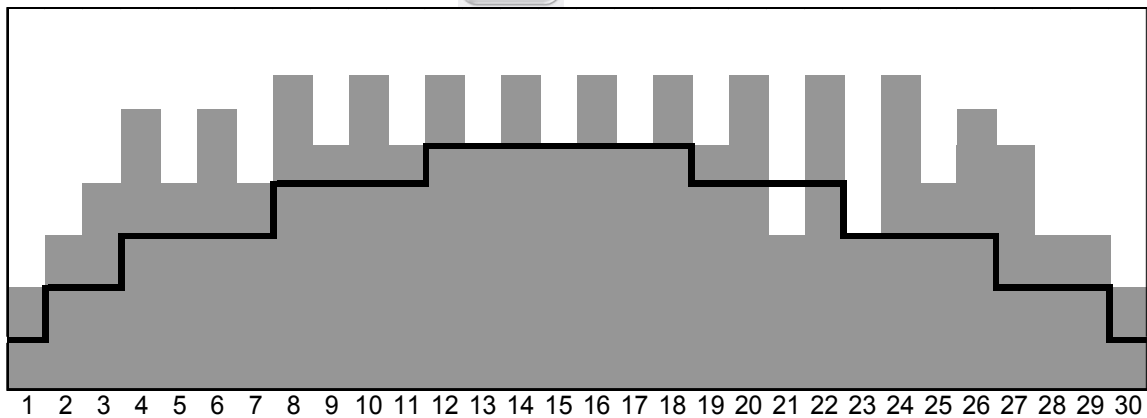


 = Speed  
 = Elevation

1. Calculate the exercise heart rate range before starting any exercise. The calculation is explained on page 17.
2. Press 
3. Enter Weight with the +/- buttons on the touch screen and press ENTER.
4. Enter Level 1-10 with the +/- buttons on the touch screen and press ENTER.
5. Enter Time with the +/- buttons on the touch screen and press ENTER. After a 3-second countdown, the program will start.

## PROGRAM DETAILS CONTINUED



### - Fat Burn

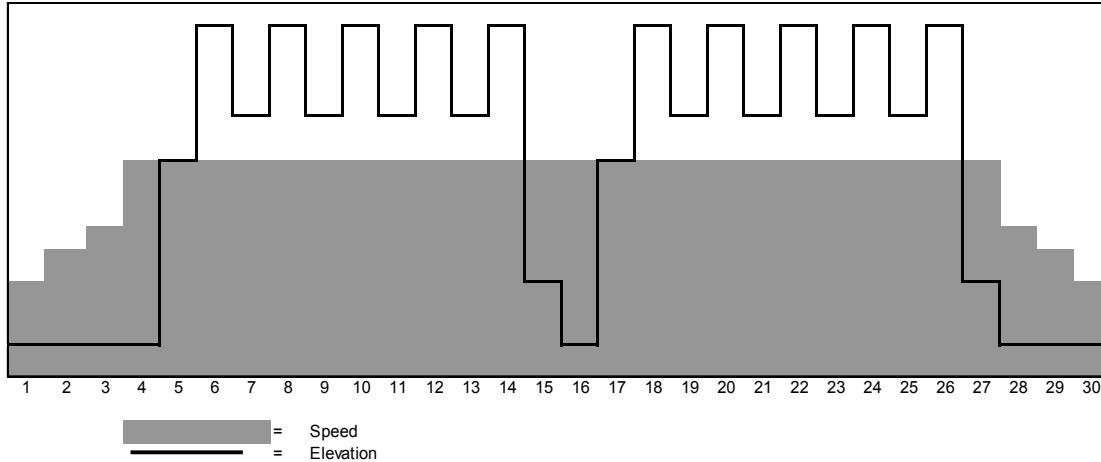

1. Calculate the exercise heart rate range before starting any exercise. The calculation is explained on page 17.
2. Press
3. Enter Weight with the +/- buttons on the touch screen and press ENTER.
4. Enter Level 1-10 with the +/- buttons on the touch screen and press ENTER.
5. Enter Time with the +/- buttons on the touch screen and press ENTER.  
After a 3-second countdown, the program will start.

**SECTION 5**

**PREVENTIVE MAINTENANCE**

The running belt can shift to one side or simply 'skid over' when running. Operate the treadmill at 3 mph for a few minutes to determine which side the belt is drifting towards, left or right. To center the belt using the 8mm Torque wrench.


If the belt is drifting left

- i) Turn the treadmill off and unplug from the outlet.
- ii) Tighten the left hexagonal head socket a ¼ turn (clockwise)
- iii) Loosen the right hexagonal head socket a ¼ turn (counterclockwise)
- iv) Run the belt at 3 mph again for a few minutes  
If the belt continues to drift to the left, repeat steps

If the belt is drifting right

- i) Turn the treadmill off and unplug from the outlet
- ii) Tighten the right hexagonal head socket a ¼ turn (clockwise)
- iii) Loosen the left hexagonal head socket a ¼ turn (counterclockwise)
- iv) Run the belt at 3 mph again for a few minutes  
If the belt continues to drift to the right, repeat steps

Once the running belt has been adjusted closer to the center, the treadmill can be powered on again.

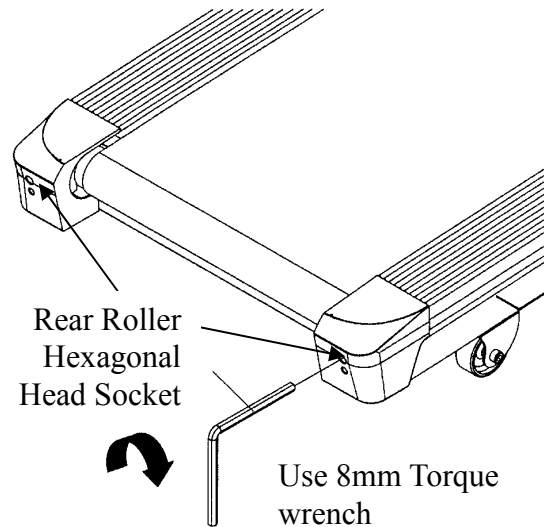


It is recommended that the deck be lubricated every 6~12 months according to the frequency of usage.

**WARNING!**

Do not use cleaner under the running belt.

- i) Turn the treadmill off and unplug from the outlet.
- ii) Use 8mm Torque wrench to loosen the hexagonal head socket in the end caps. Remove excessive accumulations of dust, dirt, and other substances from running deck. ONLY use a clean soft cloth.
- iii) Gently pull up the side of the running belt and dispense a thin layer of the lubricant on deck, and spread evenly. DO NOT over lubricate
- iv) Center the belt (use the instructions above), and tighten the hexagonal head socket.

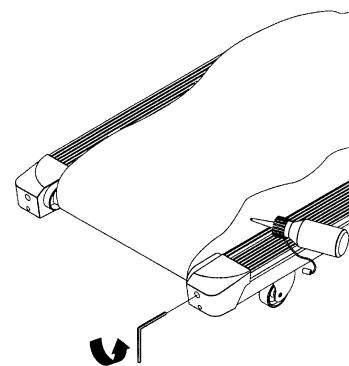

Check belt condition and if necessary adjust using the instructions above.



*Home use:*  
 4 Miles or less / hr = lube every 1 year  
 4~8 Miles / hr = lube every 6 months  
 8 Miles or more / hr = lube every 3 months  
*Commercial use:*  
 Lube every month


**SECTION 6**

**TROUBLESHOOTING**

<b>ERROR MESSAGE</b>	<b>PROBABLE CAUSES</b>	<b>SOLUTION</b>
<b>E1</b> 		
- Loss of Feedback	Speed Sensor disconnected	Check Speed Sensor Connection
- Running Deck	Running Deck not lubricated Speed Sensor misaligned	Check R-Deck oil Check Sensor position
	Speed Sensor Faulty	Replace S-Sensor
	Loose Display Cable	Check Display Cable connection
	Faulty MCB (D2 LED on)	Replace MCB
	Drive Motor disconnected	Check D-Motor connection
	Drive Motor Faulty	Replace D-Motor
<b>E6</b> 		
- Safety Key Off	Safety Key Faulty	Check Safety Key or Switch
- Elevation Motor	Elevation Motor not moving	Check Elevation Motor connection
- Stalled Elevation	Elevation Motor screw binding	Clean screw and lubricate



## TROUBLESHOOTING CONTINUED

ERROR MESSAGE	PROBABLE CAUSES	SOLUTION
	Elevation Motor out of Range	Check Zero Position of E-Motor
	E-Motor Potentiometer	Replace Elevation Motor
<b>E7</b> 		
- Elevation Motor	Elevation Motor out of Range	Replace Elevation Motor
- Display Doesn't Light Up	On/Off switch	Check if unit is turned on
	Insufficient Power Source	Plug unit in a dedicated 120V, 20Amp Outlet
	Line Cord Damaged	Replace Line Cord
	Fuse	Check Fuse on MCB

ERROR EVENT	POSSIBLE CAUSE	SOLUTION
Treadmill does not work	The Treadmill is plugged into an outlet that is not receiving electric power because the fuse or circuit breaker has shut off.	Repair fuse or circuit breaker. Contact a qualified electrician if required. Plug the treadmill into a dedicated 110-120V, 15 or 20 Amp outlet to ensure the treadmill receives the appropriate amount of current to function correctly. The outlet must not supply electricity to any other device.



**SECTION 7**

**WARRANTY**

**USA / CANADA Warranty**

**Warranties may vary in other countries. See your local BH Fitness Dealer.**

**WARRANTY SUBMITTAL**

Please have the following information available when contacting your dealer or BH for warranty support.

- A copy of the dated purchase receipt or credit card statement.
- An explanation the problem/malfunction or parts that are missing or damaged.
- Owner's name, address and phone number.
- Model (Treadmill T9) and Serial Number (when available).

Forward your information to BH North America by

FAX: (949) 206-0013

E-mail: [fitness@bhnorthamerica.com](mailto:fitness@bhnorthamerica.com)

Mail to: 20155 Ellipse, Foothill Ranch, California 92610, USA

For troubleshooting assistance or to confirm your claim please phone:

(949) 206-8152

(800) 475-7899 (USA only)

(866) 325-2339 (USA & Canada)

**BH FITNESS** extends the following exclusive, limited warranty. Any other use of the device shall void this warranty.

**FRAME** – Lifetime (Home Warranty), Lifetime (Light Commercial Warranty)

BH Fitness warrants the Frame against defects in workmanship and materials for Lifetime, so long as it remains in the possession of the original owner.

**DRIVE MOTOR** – Lifetime (Home Warranty), 10 Years (Light Commercial Warranty)

BH Fitness warrants the Drive Motor against defects in workmanship and materials for Lifetime from the date of original purchase, so long as the unit remains in the possession of the original owner for home use.

BH Fitness warrants the Drive Motor against defects in workmanship and materials for Ten years from the date of original purchase, so long as the unit remains in the possession of the original owner for light commercial use.

**ELECTRONICS & PARTS** – 10 Years (Home Warranty), 5 Years (Light Commercial Warranty)

BH Fitness warrants the Electronic components and all original parts (other than the Drive Motor) against defects in workmanship and materials for a period of Ten years from the date of original purchase, so long as the unit remains in the possession of the original owner for home use.

BH Fitness warrants the Electronic components and all original parts (other than the Drive Motor) against defects in workmanship and materials for a period of Five years from the date of original purchase, so long as the unit remains in the possession of the original owner for light commercial use.



## WARRANTY (continued)

### **LABOR – 2 Years (Home Warranty), 1 Year (Light Commercial Warranty)**

BH Fitness shall cover the labor cost for the repair of the unit for a period of Two years from the date of original purchase, so long as the unit remains in the possession of the original owner for home use. Labor Warranty does not include the travel time and or expense that may result from the unit being outside of the seller or repair technician's normal service zone.

BH Fitness shall cover the labor cost for the repair of the unit for a period of One year from the date of original purchase, so long as the unit remains in the possession of the original owner for light commercial use. Labor Warranty does not include the travel time and or expense that may result from the unit being outside of the seller or repair technician's normal service zone.

### **EXCLUSIVE REMEDY**

The exclusive remedy for any of the above warranties shall be repair or replacement of defective parts, or the supply of labor to cure any defect, provided that labor shall be as detailed above. The local retailer shall supply all labor and the product must be located within the retailer's service area. Travel time that is further than the retailer's normal service area will not be included in the products labor warranty.

### **EXCLUSIONS AND LIMITATIONS**

This warranty applies only to the original owner and is not transferable. This warranty is expressly limited to the repair or replacement of a defective Frame, Drive Motor, Electronic component, or defective part and is the sole remedy of the warranty. The warranty does not cover normal wear and tear.

**BH FITNESS** expressly disclaims all other warranties, express or implied, including but not limited to all warranties of fitness for a particular purpose or of merchantability. This warranty gives you specific legal rights and your rights may vary from state to state.

### **WARRANTY REGISTRATION**

Your warranty card must be completed and sent to BH FITNESS before a warranty claim can be processed.