



BH Fitness T8 SPORT Treadmill Owner's Manual



BH FITNESS

20155 Ellipse, Foothill Ranch, CA 92610

Phone: 949-206-8152, 800-475-7899 (USA only), 866-325-2339 (USA & Canada)

Fax: 949-206-0013

Email: fitness@bhnorthamerica.com

Web: www.bhnorthamerica.com and www.bhfitness.com

Issued: June 11, 2008 (v1)



INTRODUCTION:

Congratulations for selecting BH FITNESS as your new fitness resource. BH FITNESS treadmills offer many exercise programs that benefit users of all levels and ages. Your new treadmill is designed to make your workouts more effective and enjoyable.

Please read this entire manual carefully before using your treadmill. This will allow you to get a full understanding of all the features your BH FITNESS treadmill provides. If you have any questions or concerns, please contact BH FITNESS or any authorized BH FITNESS distributors in your area.

BH FITNESS

20155 Ellipse, Foothill Ranch, CA 92610

Phone: 949-206-8152, 800-475-7899 (USA only), 866-325-2339 (USA & Canada)

Fax: 949-206-0013

Email: fitness@bhnorthamerica.com

Web: www.bhnorthamerica.com and www.bhfitness.com

BEFORE YOU BEGIN

It is very important to become familiar with the frequently used components of your treadmill.





TABLE OF CONTENTS

| <u>SECTION</u> | <u>PAGE</u> |
|---|-------------|
| 1. IMPORTANT SAFETY INSTRUCTIONS | 4 |
| 2. ASSEMBLY INSTRUCTIONS..... | 6 |
| 3. TREADMILL AND CONSOLE..... | 11 |
| 4. WORKOUT PROGRAMS | 15 |
| 5. CALCULATING YOUR TARGET HEART RATE | 22 |
| 6. PREVENTIVE MAINTENANCE..... | 23 |
| 7. TROUBLESHOOTING | 24 |
| 8. WARRANTY | 26 |



SECTION 1

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the treadmill.

User Safety:

Before using this or any other exercise equipment **consult your family physician or health care professional** in order to develop a well-planned exercise program to fit your health needs. If you encounter any pain or breathing discomfort while working out, **STOP!**, and consult a physician before continuing.

1. Close supervision is necessary when this unit is used by or near children, invalids or disabled persons. Children are curious and vulnerable to accidents. Do not use the unit as a toy.
2. Do not wear loose or dangling clothing while using the treadmill.
3. Maximum user weight is 425 lbs for the T8 treadmill.
4. Only one person can use the unit at a time.
5. Keep hands away from moving parts.
6. The owner is responsible for explaining safety instructions to each user.

Treadmill Safety:

WARNING: To reduce the risk of fire, electric shock, injury to persons or inflicting the harm of a burn:

7. Turn all the controls to the off position prior to removing the electrical plug from the outlet. The on/off switch is located on the right, front of the unit.
8. Never leave the unit unattended when plugged in. Unplug the unit from the electrical power before leaving the room, when unused and before servicing or adding or removing parts.
9. Unplug the treadmill prior to cleaning to reduce the risk of electric shock, serious burns, and the risk of injuries.
10. Never operate this unit if it has a damaged electrical cord or plug. Do not operate this unit if it is not working properly. Do not operate this unit if it has been dropped or damaged. Do not operate this unit if it has been immersed into water. Return the unit to a service center for examination and repair.
11. Do not pull or carry the unit by the electrical cord. Do not use the cord as a handle.
12. Keep the electrical cord away from heated surfaces.
13. Connect this Treadmill to a properly grounded 110-120V, 15 or 20 Amp dedicated outlet only.
14. Call your service center or BH Fitness with your concerns before taking your treadmill in for repair.
15. Do not place sharp objects near the unit. Never drop or insert any object into any opening.
16. Do not use outdoors.
17. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
18. Use the unit only as described in this manual. Only use attachments recommended by the manufacturer.
19. For safety, keep a minimum clearance of 18" on the front and each side and 24" at the rear of the treadmill. Place the unit on a flat stable surface.


IMPORTANT SAFETY INSTRUCTIONS (continued)

GROUNDING INSTRUCTIONS

This unit must be grounded. If it malfunctions or breaks down, grounding reduces the risk of electric shock by providing a path of least resistance for electric currents. This unit is equipped with a cord that has an equipment-grounding conductor and a grounding plug. Insert the plug into an appropriate 110-120 Volt electrical outlet that is properly installed and grounded in accordance with all local codes and ordinances. Do not use an adapter or extension cord with this unit.

WARNING! – An improper connection of the grounding conductor can result in a risk of an electrical shock. Check with a qualified electrician if you are in doubt as to whether the unit is properly grounded. Do not modify the plug provided to you. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

GROUNDING METHODS

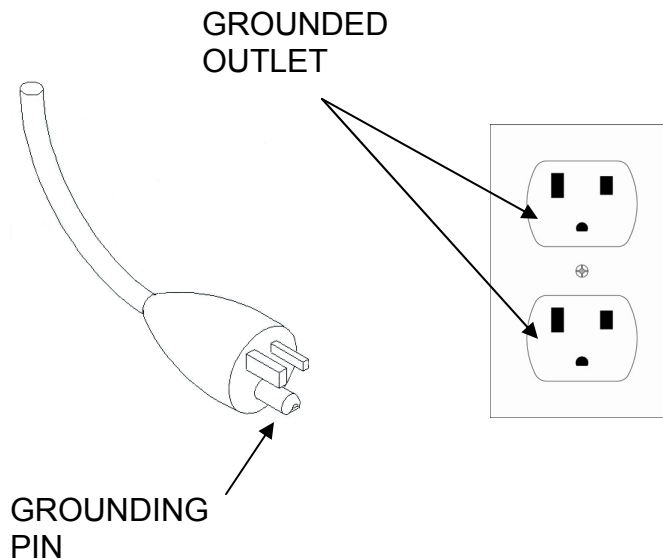


Please save these instructions

SECTION 2


ASSEMBLY INSTRUCTIONS T-8

| ITEM | DESCRIPTION | QTY |
|------|-------------------------|-----|
| A | Computer Set | 1 |
| B | Frame | 1 |
| C | Left Upright | 1 |
| D | Right Upright | 1 |
| E | Console Welding-Base | 1 |
| F | Left Handrail Cover | 1 |
| G | Right Handrail Cover | 1 |
| H | Left Handrail | 1 |
| I | Right Handrail | 1 |
| J | Cup/Bottle Holder Cover | 1 |
| K | Computer cover | 1 |
| L | Bottle | 1 |

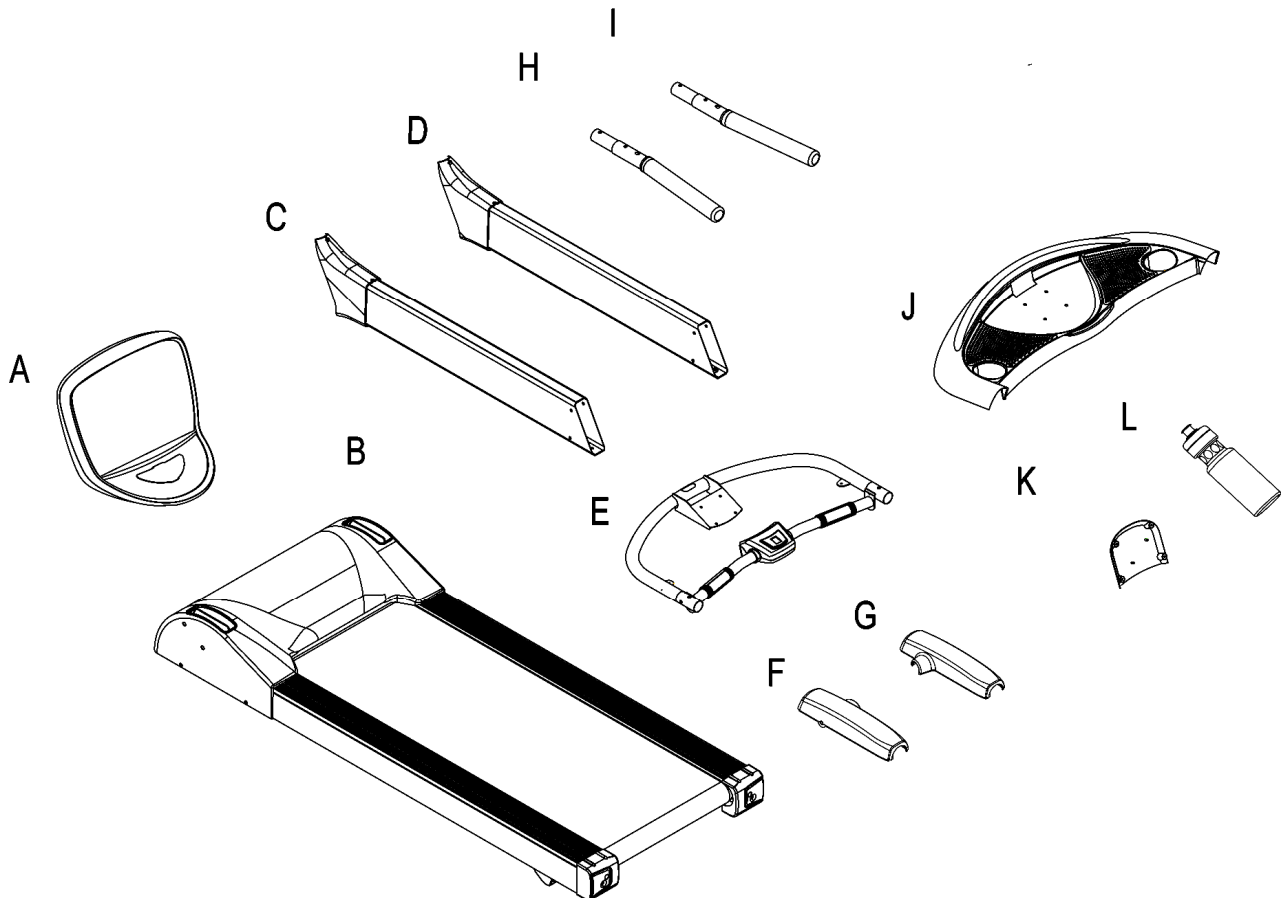

ASSEMBLY INSTRUCTIONS T-8 (continued)

| ITEM | DESCRIPTION | QTY |
|------|----------------------------|-----|
| a | Bolt M8xP1.25x40 | 2 |
| b | Bolt M8xP1.25x75 | 4 |
| c | Bolt Cover | 6 |
| d | Bolt M8xP1.25x60 | 4 |
| e | Screw ψ 5x25 | 2 |
| f | Screw ψ 4x12 | 2 |
| g | Nut | 4 |
| h | Bolt M6x15L | 2 |
| i | Screw ψ 4x16 | 2 |
| j | Allen Wrench 5 mm | 1 |
| k | T-Wrench 8mm | 1 |
| l | Power Cord | 1 |
| m | Safety Key/Clip | 1 |
| n | SILICON | 1 |
| o | Bolt M4xP0.7x8 | 4 |
| p | Box Spanner + Screw Driver | 1 |

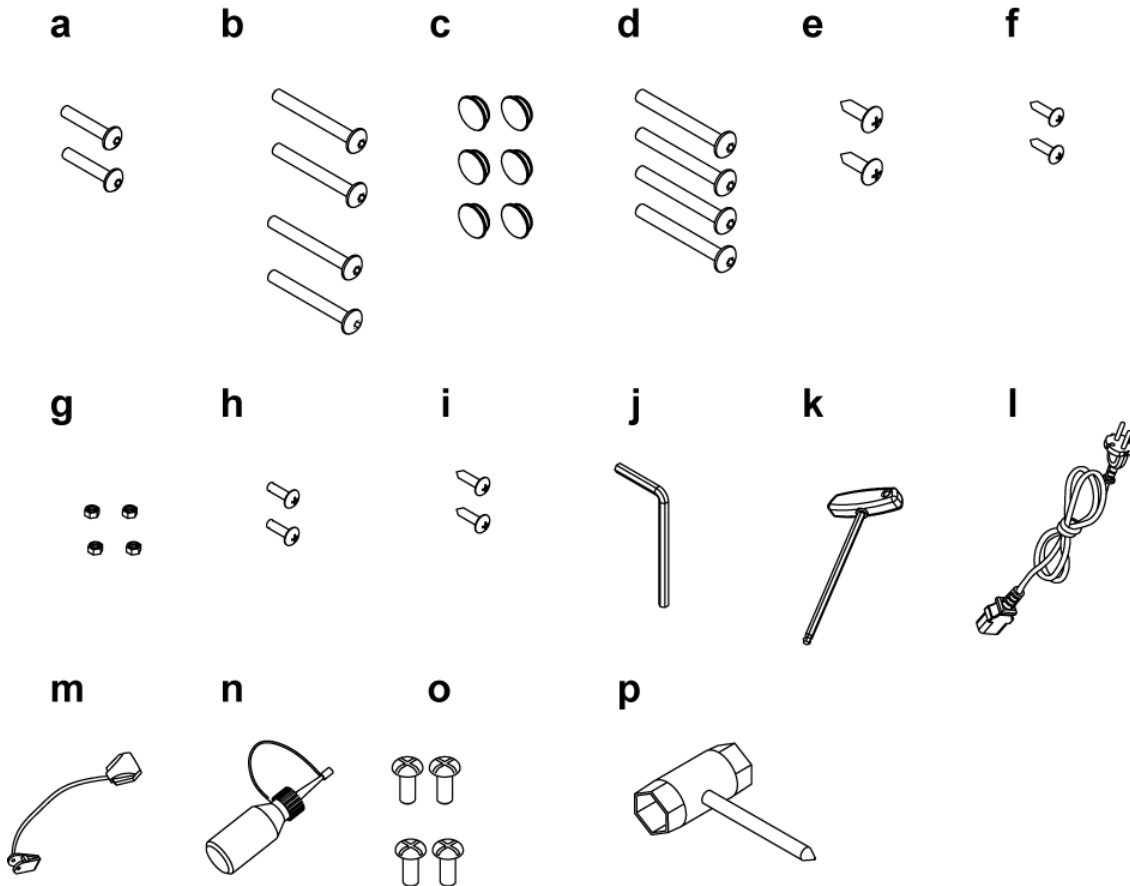


ASSEMBLY INSTRUCTIONS T-8 (continued)

A minimum of two people are required to assemble this treadmill.


READ and understand ALL INSTRUCTIONS thoroughly BEFORE ASSEMBLING the treadmill.

1. Pull out the main wire within right upright (D) with attached guide wire. Then insert both uprights (C, D) into the frame (B).
2. Tighten with bolts (a, b). Cover the bolts with bolt covers (c) as shown in the drawing.

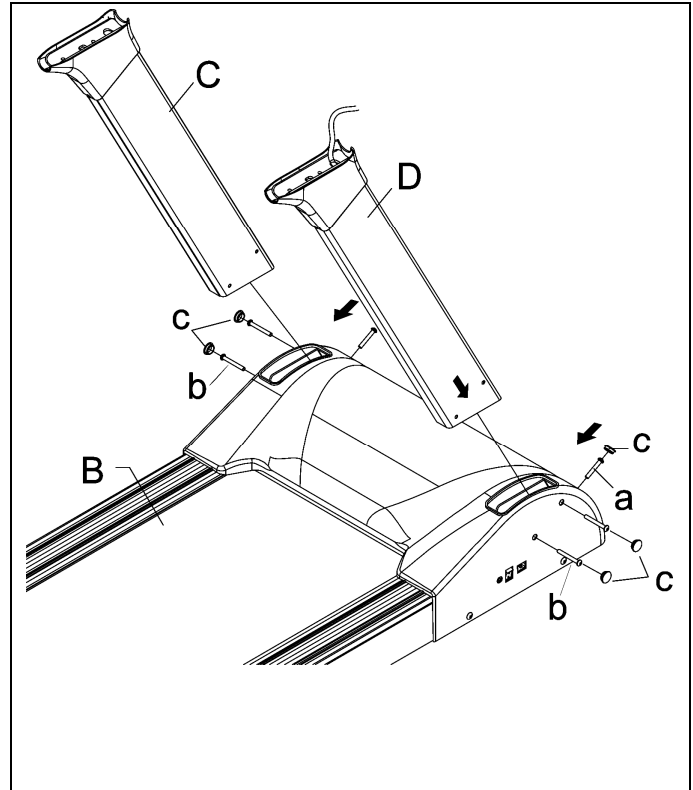

3. Insert handrails (H, I) onto the computer console welding base (E) mounting tubes.


Note: While assembling, please make sure that the holes (apertures) of the handrails match the holes (apertures) of the console welding-base (E).

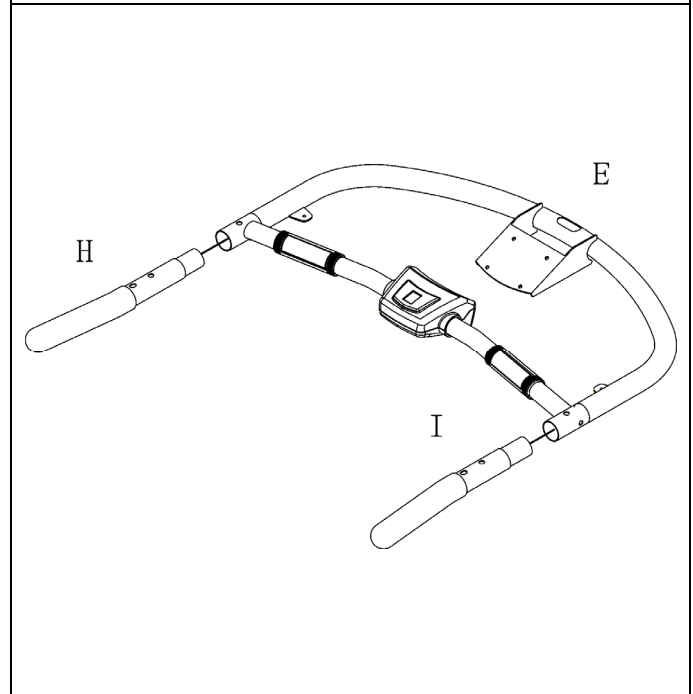

ASSEMBLY INSTRUCTIONS T-8 (continued)

- Place the completed console welding-base (E) on the uprights as the drawing shows. Connect the main wire through the console welding-base and pull out the wire from the upper holes of the console welding-base. Then stabilize them with socket bolt (d).


NOTE: When you fasten the bolts, please ensure that the bolts do not pinch the wires when securing the upright and handrail.

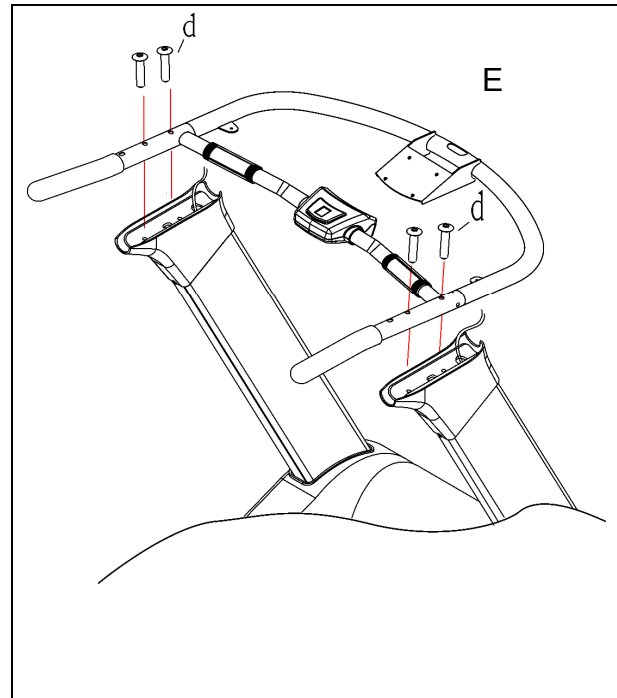

- Place the cup/bottle holder (J) on the console welding-base (E), and tighten with Allen-head screws (f).


Fasten the right and left handrail covers (F, G) with Allen-head self-tapping screws (e, i) and bolts (h).

Note: Be aware not to damage the wires during the process of tightening the screws and bolts.

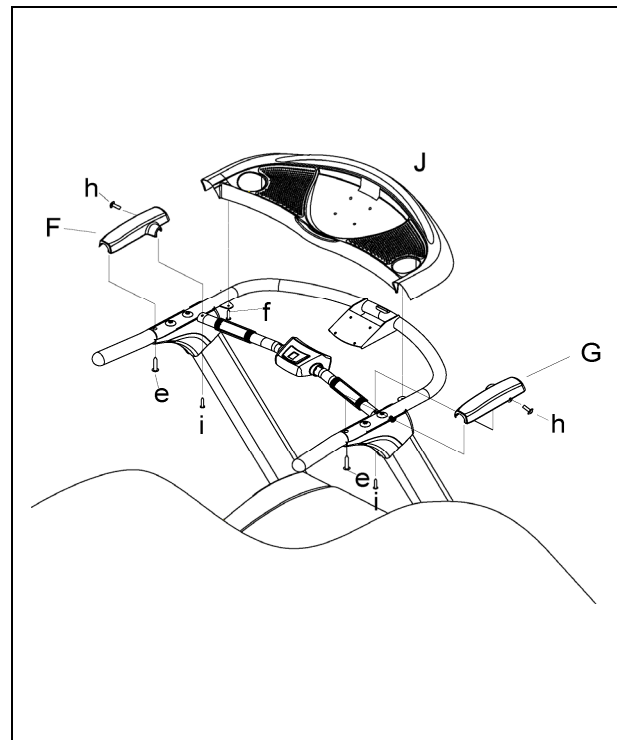

ASSEMBLY INSTRUCTIONS T-8 (continued)

- Place the Computer set (A) on the cup/bottle holder (J) and connect all wires. Hide all wires into the tube and tighten the Allen-head nut (g). Finally, attach the rear Computer cover (K) with 4 bolts (o).

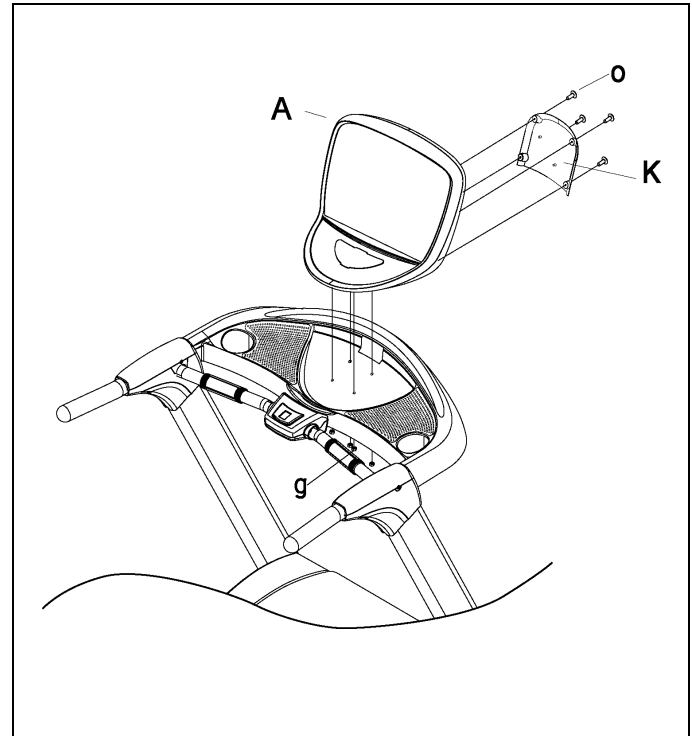



SECTION 3

TREADMILL AND CONSOLE

MOVING THE TREADMILL

Use the front wheels to move the Treadmill. Elevating the treadmill (incline) may help make the wheeling of the unit easier. Always be sure to use proper lifting form / technique. Grasp the end caps with two hands and slowly lift deck up until you are in an upright position. Keep the treadmill at that angle and wheel the unit as required.

SAFETY KEY & CLIP

Your BH Fitness treadmill is equipped with a safety key that will disable the treadmill if it is not in place. You should attach the clip end to your clothing. The magnet end goes into the recess in the center of the console. If at any time you need to stop the treadmill, pull the safety key quickly off the console. This will cut all power to the treadmill and it will come to a complete stop. To restart the treadmill, place the safety key back in place. You will then need to program your workout again.

BEFORE STARTING

Straddle the running belt and stand on the side rails. Insert the safety key and attach the clip to your clothing. Do not stand on the walking belt while starting or stopping the treadmill.

TREADMILL AND CONSOLE (continued)



T8 SPORT

KEY FUNCTIONS

QUICK/START – This key is used to begin any treadmill program or QUICK/START.


MODE – This key is used to enter into the program mode.

STOP/RESET – This key is used to stop the treadmill at any time. In the standby position, press the Stop key for 5 seconds to set the incline to zero from an elevated position.


ENTER – This key is used to confirm the value of the current selection.



These keys are used to adjust the elevation of the treadmill.



These keys are used to adjust the speed of the treadmill.

Note: To switch between the metric system (kilometers) and the English system (miles), press and hold the Enter key for 10 seconds at the Start/Ready position after power on. At this time, the window will display: 0 (the English system) or 1 (the metric system). Use the Incline  keys to select. Press the Enter key to accept the selection.



TREADMILL AND CONSOLE (continued)

INSTANT SPEED/ELEVATION KEYS – You can change the speed or elevation of the treadmill by pressing one of the Instant Key buttons.

CONSOLE FEEDBACK

TIME – This will read the number of minutes left in the program that you have selected. In **QUICK START** it will read the number of minutes that you have been exercising.

CALORIES – This reading is the amount of body heat in calories burned during your workout. As with all pieces of exercise equipment, this is an estimated value.

INCLINE – Incline will read as a percent of grade.

NOTE: Important information about Incline:

1. If the Incline is elevated when the safety key is removed and put back, the Incline does reset automatically to zero.
2. If the Incline is elevated when the user turns off power and then turns it back on, the Incline does reset automatically to zero.
3. If the Incline is elevated in the standby position, press the Stop key for 5 seconds to set the incline to zero.

PULSE – Pulse will display in Beats Per Minute (BPM).

SPEED – This is how fast the treadmill moves in Miles Per Hour (MPH).

DISTANCE – Total distance traveled during your workout in miles.

TREADMILL AND CONSOLE (continued)


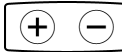

USING HEART RATE

NOTE: See page 22 for Target Heart Rate Instructions.

PULSE GRIP – To periodically check your heart rate, grasp the sensors at the base of the console. The PULSE LED will flash and after about 9 seconds your pulse will be shown in the pulse window.

QUICK START



1. Stand on the side rails.
2. Use 2.A. or 2.B.
 - A. If POWER is off, turn on POWER switch, then go to step 3.
 - B. If POWER is on and a Program has been completed or interrupted by pressing STOP/RESET, then do the following:
 - 1.) Press STOP. Press and hold STOP until TIME = 0:00.
 - 2.) Wait for the Incline to go down to zero.
 - 3.) Press and hold ENTER until the console double beeps and the TIME screen is blank.
 - 4.) Press ENTER again.
3. Weight will be flashing. (Default is 150 lbs.)
4. Adjust weight if you wish with the  keys.
5. Press QUICK/START and the unit will move at 0.5 MPH.
6. Adjust Speed with the  or instant speed keys.
7. Adjust Incline with the  or instant incline keys.

TO STOP

1. Step off running belt onto the side rails.
2. Press STOP/RESET. The running belt will stop.

NOTE: For an immediate stop, pull the safety key out of the safety key recess and the treadmill will stop abruptly.

SECTION 4

WORKOUT PROGRAMS





Your BH FITNESS treadmill will provide both manual controlled and factory installed preset workout programs.

In MANUAL, you control the speed and/or elevation at your discretion. For QUICK START exercise with Time setting, refer to Manual Program.

In PRESET programs, the speed and/or elevation will change in accordance with the program's profile (as illustrated on the following pages).



In any program, pressing the Stop key will pause the current program. To resume the current program press the Start key. To exit the current program and return to the standby mode, press the Stop key again.

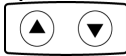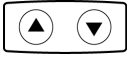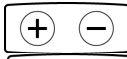MANUAL PROGRAM (P-01) SETUP

1. Stand on the side rails.
2. Use 2.A. or 2.B.
 - A. If POWER is off, turn on POWER switch, then go to step 3.
 - B. If POWER is on and a program has been completed or interrupted by pressing STOP/RESET, then do the following:
 - 1.) Press STOP. Press and hold STOP until TIME = 0:00.
 - 2.) Wait for the Incline to go down to zero.
 - 3.) Press and hold ENTER until the console double beeps and the TIME screen is blank.
 - 4.) Press ENTER again.
3. Weight will be flashing. (Default is 150 lbs.)
4. Adjust weight with the  keys and press ENTER.
5. Press MODE key ~ Program P-01 light will be flashing.
6. Press ENTER key ~ Time will be flashing.
7. Adjust time with the  keys.
8. Press QUICK/START and the unit will move at 0.5 MPH.
9. Adjust Speed with the  or instant speed keys.
10. Adjust Incline with the  or instant incline keys.




WORKOUT PROGRAMS (continued)

PROGRAM (P-02 through P-07) SETUP

1. Stand on the side rails.
2. Use 2.A. or 2.B.
 - A. If POWER is off, turn on POWER switch, then go to step 3.
 - B. If POWER is on and a program has been completed or interrupted by pressing STOP/RESET, then do the following:
 - 1.) Press STOP. Press and hold STOP until TIME = 0:00.
 - 2.) Wait for the Incline to go down to zero.
 - 3.) Press and hold ENTER until the console double beeps and the TIME screen is blank.
 - 4.) Press ENTER again.
3. Weight will be flashing. (Default is 150 lbs.)
4. Adjust weight with the  keys and press ENTER.
5. Press MODE key ~ Program P-01 light will be flashing.
6. Select program P-02 through P-07 with the  keys.



NOTE: Program P-02, skip to Step 8

7. Press ENTER ~ Time light will be flashing.
8. Adjust time with the  keys.
9. Press ENTER ~ Speed will be flashing.
10. Adjust speed with the  keys.
11. Press ENTER ~ Incline will be flashing.
12. Adjust incline with the  keys.
13. Press QUICK/START to begin the workout.








WORKOUT PROGRAMS (continued)

PROGRAM (P-08) (HRP – Heart Rate Program)

NOTE: P-08 requires a Chest Strap, such as POLAR T41 Transmitter, sold separately.

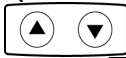

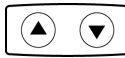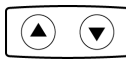
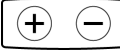

NOTE: See Page 22 for Target Heart Rate instructions

1. Stand on the side rails.
2. Use 2.A. or 2.B.
 - A. If POWER is off, turn on POWER switch, then go to step 3.
 - B. If POWER is on and a program has been completed or interrupted by pressing STOP/RESET, then do the following:
 - 1.) Press STOP. Press and hold STOP until TIME = 0:00.
 - 2.) Wait for the Incline to go down to zero.
 - 3.) Press and hold ENTER until the console double beeps and the TIME screen is blank.
 - 4.) Press ENTER again.
3. Weight will be flashing. (Default is 150 lbs.)
4. Adjust weight with the  keys and press ENTER.
5. Press MODE key ~ Program P-01 light will be flashing.
6. Select P-08 program with the  keys.
7. Press ENTER ~ Time will be flashing.
8. Adjust time with the  keys.
9. Press ENTER ~ Age will be flashing.
10. Adjust age with the  keys.
11. Press ENTER ~ Pulse will be flashing.
12. Adjust pulse with the  keys.
13. Press QUICK/START to begin the workout.



WORKOUT PROGRAMS (continued)

CUSTOM PROGRAMS (P-09 and P-10) SETUP

1. Stand on the side rails.
2. Use 2.A. or 2.B.
 - A. If POWER is off, turn on POWER switch, then go to step 3.
 - B. If POWER is on and a program has been completed or interrupted by pressing STOP/RESET, then do the following:
 - 1.) Press STOP. Press and hold STOP until TIME = 0:00.
 - 2.) Wait for the Incline to go down to zero.
 - 3.) Press and hold ENTER until the console double beeps and the TIME screen is blank.
 - 4.) Press ENTER again.
3. Weight will be flashing. (Default is 150 lbs.)
4. Adjust weight with the  keys and press ENTER.
5. Press MODE key ~ Program P-01 light will be flashing.
6. Use the  keys to select P-09 or P-10.
7. Press ENTER ~ Time will be flashing.
8. Adjust time with the  keys.
9. Press ENTER ~ Display will show S=01 (Segment #1).
10. Adjust the speed of this segment with the  keys or instant speed keys.
11. Adjust the incline of this segment with the  keys or instant incline keys.
12. Press ENTER ~ Display will show S=02 (Segment #2).
13. Repeat steps 9, 10 and 11 up to S=30 (30 segments).
14. Press QUICK/START at any time to end data entry and begin workout.

Custom programs will be stored in the system for easy retrieval unless you reprogram the segments of the custom program.


NOTE: You can program up to 30 exercise level segments; however, you can stop at any segment you desire. The segment you end at prior to segment 30 will be run at default incline and speed of 0% and 0.5 MPH respectively.

However, you can edit the program at the segment you are currently on and the built-in software will automatically adjust the rest of the segments to match.


WORKOUT PROGRAMS (continued)

(P2) 9 Hole Walk

(The 9 Hole is a preset distance of 2.17miles. No Need to adjust time)

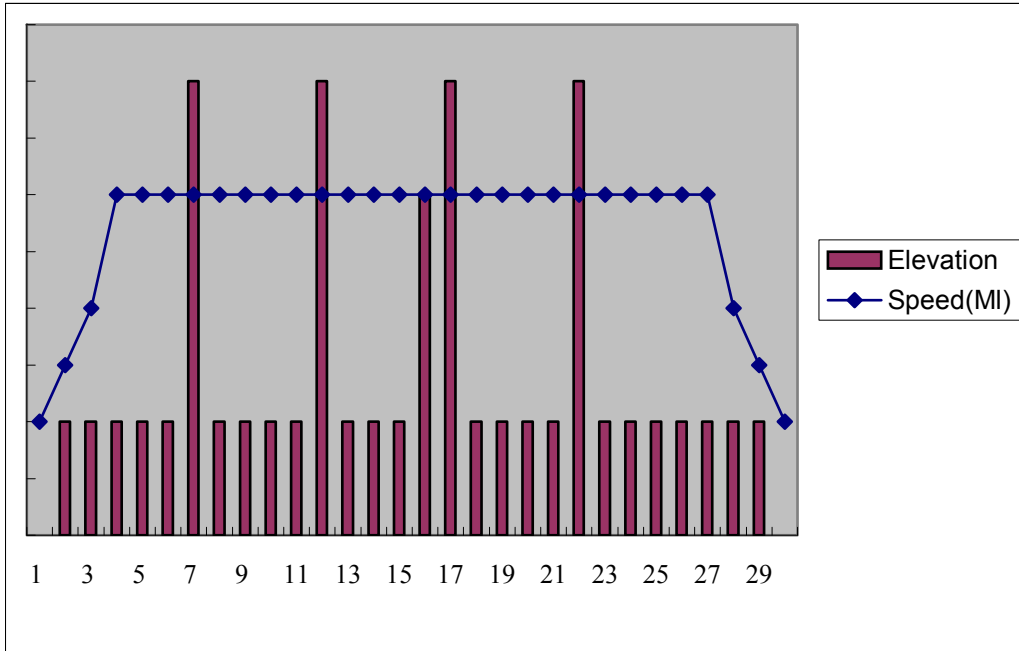


(P3) Hill Climb

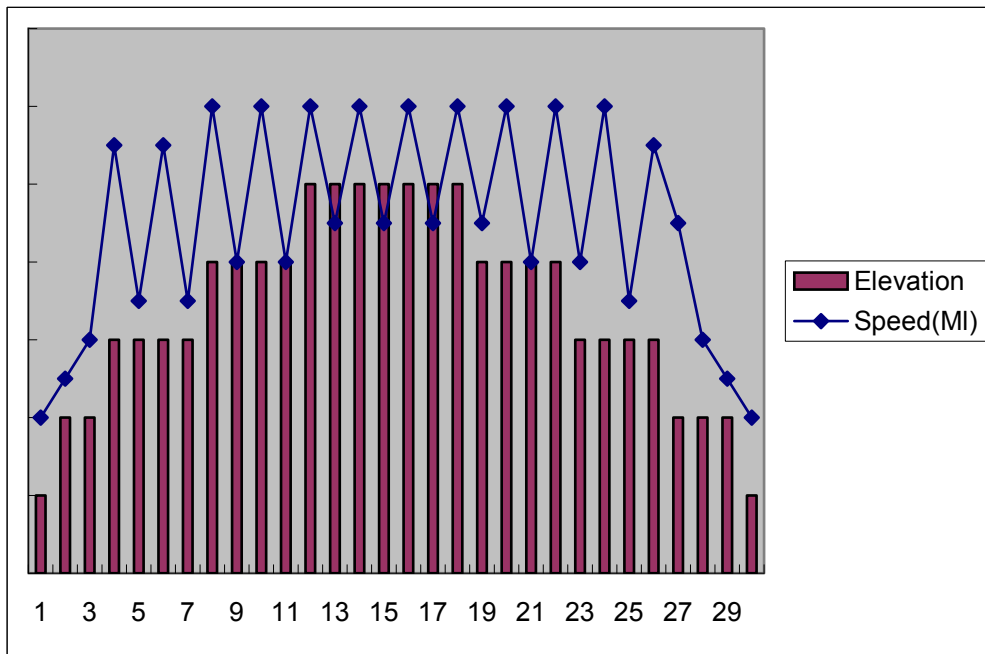


WORKOUT PROGRAMS (continued)

(P4) Endurance Run

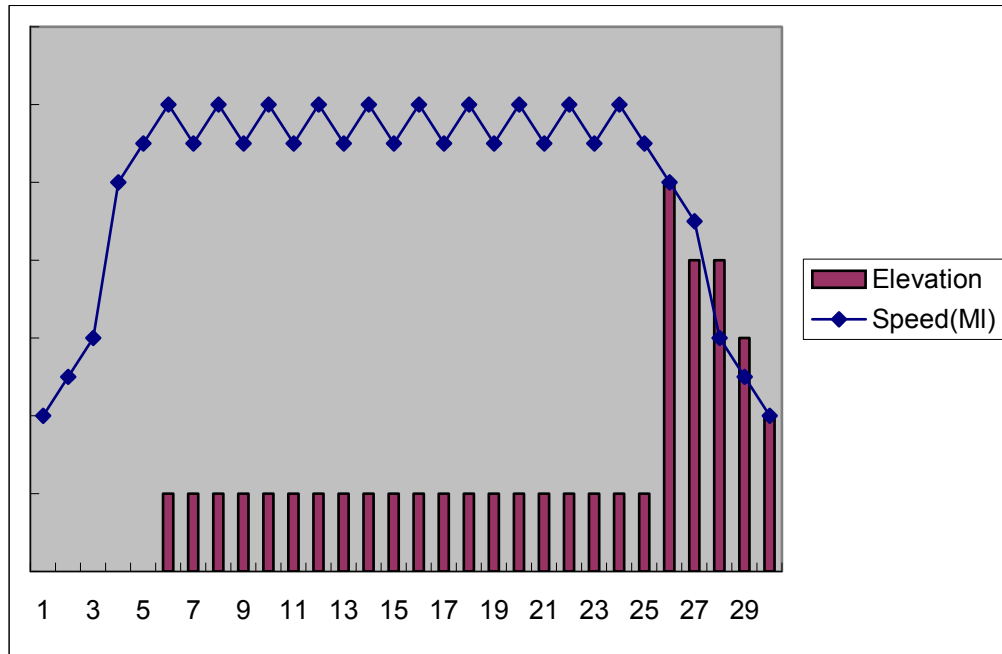


(P5) Interval Run

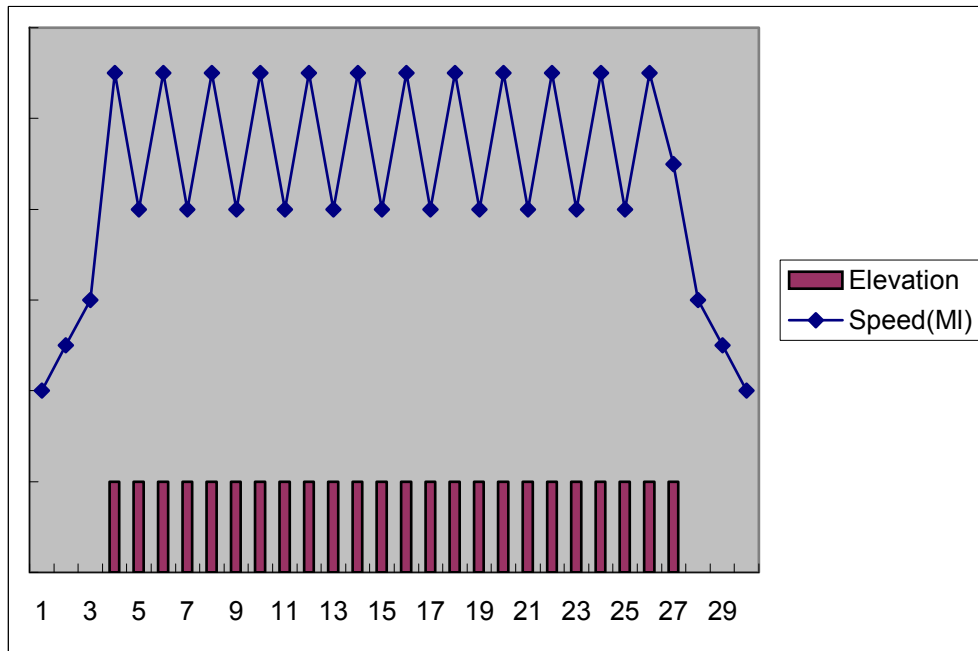


WORKOUT PROGRAMS (continued)

(P6) Rolling Run

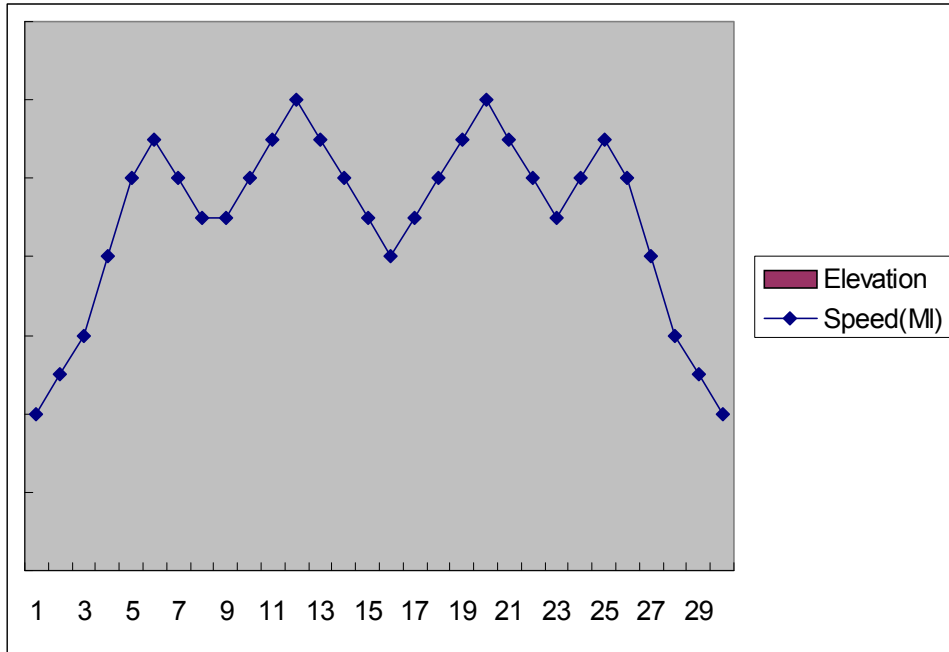

(P7) Weight Loss Walk

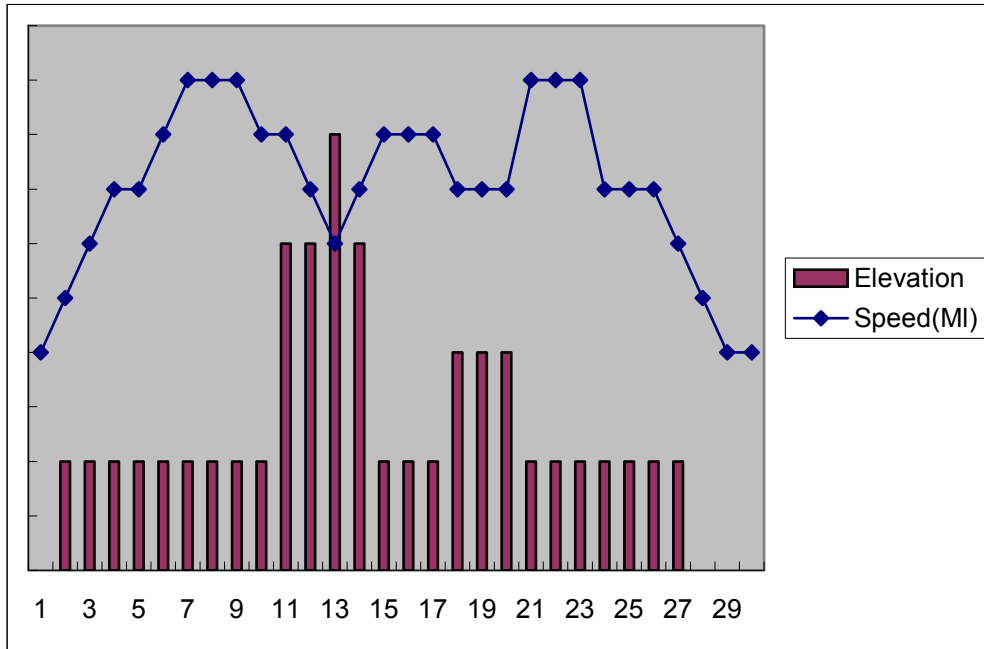

(P8) HEART RATE CONTROL (HRC) – Based on AGE, PULSE and TIME inputs



SECTION 5

CALCULATE YOUR TARGET HEART RATE

Heart Rate (HR) training has become one of the most popular forms of monitoring your workouts. Nothing tells you how your body is feeling like your own heart. By using your heart rate to tell you how hard to train, you can maximize your workout results.

STEP ONE

Determining your Maximum Heart Rate:

The standard calculation for determining your maximum heart rate, Beats Per Minute (BPM), is to take your age and subtracting it from the number 220.

Example: If you are 30 years of age, your maximum heart rate is:
 $220 - 30 = 190$ BPM.

STEP TWO

Select your ideal workout HR Zone:

Once you have your maximum heart rate you can use it to determine your Target HR Zone based on your fitness goal(s).

Recent studies have shown:

60-70% of your maximum HR will allow you to loose weight.

70-80% of your maximum HR will improve your aerobic fitness.

80-85% of your maximum HR will increase your athletic performance.

NOTE: DO NOT exceed 85% of your maximum heart rate.

STEP THREE

Calculate your ideal Target HR:

Using the above percentages, you can calculate your ideal Target Heart Rate for your specific goal.

As an example, the average 30 year old can:



Maximize burn fat / weight loss, by maintaining ~123 BPM during a workout
 $190 * 0.65 = 123$ BPM.

Improve aerobic fitness, by maintaining ~142 BPM during a workout
 $190 * 0.75 = 142$ BPM.

Remember to **consult your family physician or health care professional** to develop a well-planned exercise program to fit your health needs.

SECTION 6

PREVENTIVE MAINTENANCE
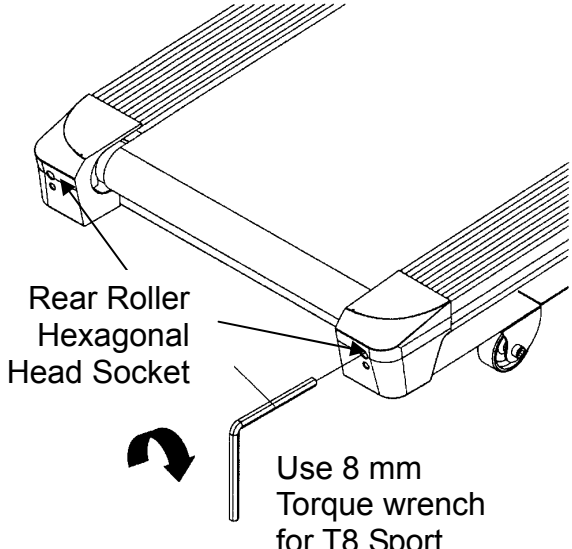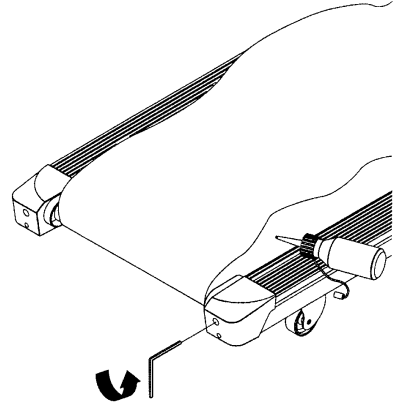
| | |
|--|---|
| <p>The running belt can shift to one side or simply 'skid over' when running. Run the machine at 3 mph for a few minutes to determine which side the belt is drifting towards, left or right. Center the belt using the 8 mm Torque wrench.</p> <p>If the belt is drifting left.</p> <ol style="list-style-type: none"> i) Turn the treadmill off and unplug from the machine. ii) Tighten the left hexagonal head socket a ¼ turn (clockwise). iii) Loosen the right hexagonal head socket a ¼ turn (counterclockwise). iv) Run the belt at 3 mph again for a few minutes. If the belt drifts to the left, repeat steps. <p>If the belt is drifting right.</p> <ol style="list-style-type: none"> i) Turn the treadmill off and unplug from the machine. ii) Tighten the right hexagonal head socket a ¼ turn (clockwise). iii) Loosen the left hexagonal head socket a ¼ turn (counterclockwise). iv) Run the belt at 3 mph again for a few minutes. If the belt drifts to the right, repeat steps. <p>Once the running belt has been adjusted, closer to the center, the treadmill can be powered on again.</p> |  <p style="text-align: center;">Rear Roller Hexagonal Head Socket</p> <p style="text-align: center;">Use 8 mm Torque wrench for T8 Sport</p> |
| <p>It is recommended that the deck be lubricated every 3~12 months according to the frequency of usage.</p> <p style="text-align: center;">WARNING!</p> <p style="text-align: center;">Do not use cleaner under the running belt.</p> <ol style="list-style-type: none"> i) Use 8 mm Torque wrench to loosen the hexagonal head socket in the end caps. Remove excessive accumulations of dust, dirt, and other substances from running deck. ONLY use a clean soft cloth. ii) Gently pull up the side of the running belt. Dispense a thin layer of the lubricant on deck, and spread evenly. DO NOT over lubricate. iii) Center the belt (using the instructions above), and tighten the hexagonal head socket. <p>Check belt condition and if necessary adjust using the instructions above.</p> |  <div style="border: 1px solid black; padding: 5px; margin-top: 10px; text-align: center;"> <p><i>4 Miles or less / hr = lube every 1 year</i></p> <p><i>4~8 Miles / hr = lube every 6 months</i></p> <p><i>8 Miles or more / hr = lube every 3 months</i></p> </div> |

SECTION 7

TROUBLESHOOTING

| ERROR MESSAGE | POSSIBLE CAUSES | SOLUTION |
|---------------------|-------------------------------|----------------------------------|
| E1 | | |
| - Loss of Feedback | Speed Sensor disconnected | Check Speed Sensor Connection |
| - Running Deck | Running Deck not lubricated | Check R-Deck oil |
| | Speed Sensor misaligned | Check Sensor position |
| | Speed Sensor Faulty | Replace S-Sensor |
| | Loose Display Cable | Check Display Cable connection |
| | Faulty MCB (D2 LED on) | Replace MCB |
| | Drive Motor disconnected | Check D-Motor connection |
| | Drive Motor Faulty | Replace D-Motor |
| E6 | | |
| - Safety Key Off | Safety Key Faulty | Check Safety Key or Switch |
| - Elevation Motor | Elevation Motor not moving | Check Elevation Motor connection |
| - Stalled Elevation | Elevation Motor screw binding | Clean screw and lubricate |



TROUBLESHOOTING (continued)

| ERROR MESSAGE | POSSIBLE CAUSES | SOLUTION |
|----------------------------|------------------------------|---|
| | Elevation Motor out of Range | Check Zero Position of E-Motor |
| | E-Motor Potentiometer | Replace Elevation Motor |
| E7 | | |
| - Elevation Motor | Elevation Motor out of Range | Replace Elevation Motor |
| - Display Doesn't Light Up | On/Off switch | Check if unit is turned on |
| | Insufficient Power Source | Plug unit into a dedicated 110-120V, 20Amp Outlet |
| | Line Cord Damaged | Replace Line Cord |
| | Fuse | Check Fuse on MCB |

| ERROR EVENT | POSSIBLE CAUSE | SOLUTION |
|-------------------------|---|---|
| Treadmill does not work | A fuse or circuit breaker has shut off electric power to the outlet that the Treadmill is plugged into. | Repair fuse or circuit breaker. Contact a qualified electrician if required. Plug the treadmill into a dedicated 110-120V, 15 or 20 Amp outlet to ensure the treadmill receives the appropriate amount of current to function correctly. The outlet must not supply electricity to any other device. |



SECTION 8

WARRANTY

USA / CANADA Warranty

Warranties may vary in other countries. See your local BH Fitness Dealer.

WARRANTY SUBMITTAL

Please have the following information available when contacting your dealer or BH for warranty support.

- A copy of the dated purchase receipt or credit card statement.
- An explanation the problem/malfunction or parts that are missing or damaged.
- Owner's name, address and phone number.
- Model (Treadmill T8 SPORT) and Serial Number (when available).

Forward your information to BH North America by

FAX: (949) 206-0013

E-mail: fitness@bhnorthamerica.com

Mail to: 20155 Ellipse, Foothill Ranch, California 92610, USA

For troubleshooting assistance or to confirm your claim please phone:

(949) 206-8152

(800) 475-7899 (USA only)

(866) 325-2339 (USA & Canada)

BH FITNESS extends the following exclusive, limited warranty. Any other use of the unit shall void this warranty.

FRAME – Lifetime (Home Warranty). Lifetime (Light Commercial Warranty)

BH Fitness warrants the Frame against defects in workmanship and materials for Lifetime from the date of original purchase, so long as it remains in the possession of the original owner for home use.

BH Fitness warrants the Frame against defects in workmanship and materials for Lifetime from the date of original purchase, so long as it remains in the possession of the original owner for light commercial use.

DRIVE MOTOR – Lifetime (Home Warranty). 10 Years (Light Commercial Warranty)

BH Fitness warrants the Drive Motor against defects in workmanship and materials for Lifetime from the date of original purchase, so long as the unit remains in the possession of the original owner for home use.

BH Fitness warrants the Drive Motor against defects in workmanship and materials for Ten years from the date of original purchase, so long as the unit remains in the possession of the original owner for light commercial use.



WARRANTY (continued)

ELECTRONICS & PARTS – 10 Years (Home Warranty). 5 Years (Light Commercial Warranty)

BH Fitness warrants the Electronic components and all original parts (other than the Drive Motor) against defects in workmanship and materials for a period of Ten years from the date of original purchase, so long as the unit remains in the possession of the original owner for home use.

BH Fitness warrants the Electronic components and all original parts (other than the Drive Motor) against defects in workmanship and materials for a period of Five years from the date of original purchase, so long as the unit remains in the possession of the original owner for light commercial use.

LABOR – 2 Years (Home Warranty). 1 Year (Light Commercial Warranty)

BH Fitness shall cover the labor cost for the repair of the unit for a period Two years from the date of original purchase, so long as the unit remains in the possession of the original owner for home use. Labor warranty does not include the travel time and or expense that may result from the unit being outside of the seller or repair technician's normal service zone.

BH Fitness shall cover the labor cost for the repair of the unit for a period of One year from the date of original purchase, so long as the unit remains in the possession of the original owner for light commercial use. Labor warranty does not include the travel time and or expense that may result from the unit being outside of the seller or repair technician's normal service zone.

EXCLUSIVE REMEDY

The exclusive remedy for any of the above warranties shall be repair or replacement of defective parts, or the supply of labor to cure any defect, provided that labor shall be limited as detailed above. All labor shall be supplied by the local retailer and the product must be located within the retailer's service area. Travel time that is further than the retailer's normal service area will not be included in the products labor warranty.

EXCLUSIONS AND LIMITATIONS

This warranty applies only to the original owner and is not transferable. This warranty is expressly limited to the repair or replacement of a defective Frame, Drive Motor, Electronic component, or defective part and is the sole remedy of the warranty. The warranty does not cover normal wear.

BH FITNESS expressly disclaims all other warranties, express or implied, including but not limited to all warranties of fitness for a particular purpose or of merchantability. This warranty gives you specific legal rights and your rights may vary from state to state.

WARRANTY REGISTRATION

Your warranty card must be completed and sent to BH FITNESS before a warranty claim can be processed.